

RoHS (E

取扱説明書

側面取付型

OCA-S300BC

OCA-S300BCS

OCA-S600BC

OCA-S1000BC

OCA-S1600BC

·<u>/</u>/ 注意

- ご使用になる前に必ずお読みください。
- いつも側に置いてお使いください。

≪目次≫

	1.	安全に関するご注意2
	2.	制御盤への取付け方法3~7
	3.	配線8~9
	4.	運転9~14
	5.	アラーム・安全機能 1 5
	6.	メンテナンス16~17
	7.	仕様
	8.	保証期間2 4
	9.	フロン回収について2 4
1	0.	廃棄について24

才-厶電機株式会社

1. 安全に関するご注意

- このクーラは制御盤用クーラです。本来の目的以外では、絶対に使用しないでください。
- ご使用になる前に「安全に関するご注意」をよくお読みの上、正しくお使いください。
- 取扱説明書に示した注意事項は、安全に関する重大な内容を記載していますので必ず守ってください。 表示と意味は次のようになっています。



危.険

取扱いを誤った場合、使用者が死亡または重傷を負う危険が切迫して生じることが想定される場合



取扱いを誤った場合、使用者が損害を負う危険が想定される場合および物的損害のみが想定される場合

「図記号」の意味は次のようになっています。



絶対にしてはいけない「禁止」を意味します。



「回転物注意」を意味します。



気をつけていただく「注意喚起」を意味します。



「感電注意」を意味します。



必ず実施していただく「強制」を意味します。



危険



通電中は端子台に触らないでください。

⚠ 注意



通電中は前面カバーを外さないでください。ファン回転部に指や異物を入れないでください。 作業は電源を切り、ファンが停止してから行ってください。

→ケガの原因になります。

屋外での使用はできません。



引火性ガス、腐食性ガス、油煙、絶縁を悪くするチリ等が発生または充満する場所では使用できません。 →寿命の低下、損傷の原因になります。

振動・衝撃のある場所では使用できません。

本体の改造・修理は絶対にしないでください。また、修理をする場合はメーカにご相談ください。

冷却回路に密封されている冷媒や油は、環境保護のため専門的な処理が必要です。 廃棄処理をする場合、必ず専門の処理業者によって処理をしてください。

クーラを設置する際、必ず周囲は円滑な空気循環が確保されている場所に設置または取付けてください。 →冷却能力が低下します。



クーラを運搬する場合、必ず傾斜させないで垂直になる様に運搬してください。 また、制御盤に取付けた状態での運搬は絶対にしないでください。

周囲温度が+20℃~+50℃で、周囲湿度が 85%RH 以下(非結露)の範囲で必ず使用してください。

クーラを保管する時は、必ず横および逆さにせず、周囲温度が+70℃を越すような環境では保管しないでください。

- クーラが納入された時、その梱包状態が損傷していないか確認してください。
 - →梱包の損傷は、クーラの故障の原因につながりますので、損傷を受けたクーラは絶対に使用しないでくだ さい。



フィルタは、付属のものを使用してください。

→目の細かなフィルタを使用すると、放熱効率が下がり、冷却能力の低下・故障の原因になります。

クーラは、お子様や身体に何らかの障害を持つ方、又はクーラに関する知識の無い方のご使用はお避けください。 ただし、クーラに関する知識を有する者の監視の下、あるいはご使用に関する教育を受けている場合は、この限 りではありません。

2. 制御盤への取付け方法

2-1 取付けに関するご注意

⚠ 危険



クーラを制御盤へ取付けるときは、感電防止のため制御盤自体への電源供給を停止させてください。

⚠ 注意



クーラの設置には、付属品以外のものは使用しないでください。

→故障やケガの原因になります。


取付穴(M6)に直接回転力が加わるような使い方はしないでください。

→取付穴にはカシメ袋ナットを採用しているため空転する恐れがあります。

取付面(パネルカット)は、規定の寸法で加工してください。

クーラの取付けは、図のように必ず水平・垂直(±2°)に 取付けてください。


→クーラの安定動作を図り、クーラで除湿した水をスムーズに排出 させるためです。

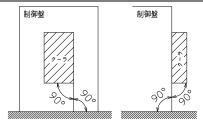




クーラの設置は、円滑な空気循環を確保し、他のユニットまたは壁と 200mm 以上離して設置してください。

また制御盤内の空気循環が、必ず妨げられないようにしてください。 上記が守られないと、空気循環が悪くなり、冷却能力の低下や結露が 生じます。

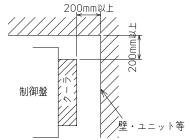

クーラの使用電源は、必ず銘板に表記してある指定定格電圧を使用してく ださい。

また、クーラへの電源取入れ口には、必ず適切なブレーカを介して接続し、 漏電による感電防止のため、アース線は必ず接地してください。

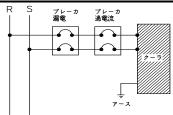

クーラの設置には電気工事が必要です。専門業者にご相談ください。

→配線等の設置工事に不備があると感電や火災の原因となります。

クーラを設置後、コンプレッサの保護のため、必ず30分以上経過してから通電、運転を開始してください。

設置する制御盤の気密性の確保(シーリング)を充分に行ってください。

→気密性が不充分であると結露が生じ、冷却効果が低下します。

制御盤へ取付面(パネルカット)を加工する際は、キリ粉が盤内機器に入らないよう布等でカバーしてから作業を行ってください。




ショートサーキットについて

クーラ冷風吹出口付近に制御盤内の機器や障害物がある場合、冷風がそれにあたりクーラの吸込口へ直接戻ってしまうことがあります (ショートサーキット)。

この場合、制御盤内に冷気が行き渡らず、盤内機器の故障の原因となります。


また、クーラの運転にも負荷がかかり、過電流やクーラの 故障の原因となります。

クーラ運転時にショートサーキットが確認された場合は、 整風板の取付けや、攪拌用ファンを設置するなどして冷風 のショートサーキットを防止してください。

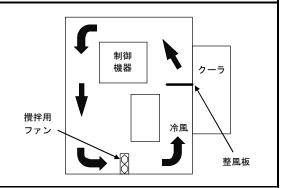


2-2 取付け手順

- (1) 盤外取付け手順
 - ① 各機種の盤外取付けパネルカット図(P.5)に従って、開口部を取付け面に加工してください。
- ② クーラに付属の取付ボルトを取付けてください。(機種により本数が異なります。)
- ③パッキン貼付け図(P.6)に従って、クーラ背面の取付ボルトの外側全周に付属のパッキンを貼ってください。
- ④取付面(パネルカット)に合わせてクーラを設置してください。
- ⑤盤内からワッシャ、ナットを使用して、確実に固定してください。
- ⑥制御盤の気密性を確保する為に、必要に応じてシーリングを行ってください。
- ⑦付属の「アラーム説明シール」を見やすい位置へ貼付けてください。

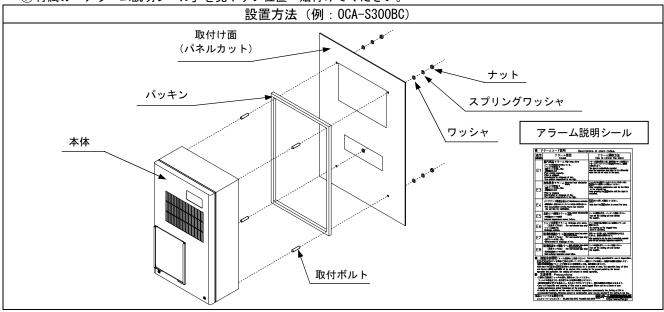

(2) 埋込取付け手順(最大制御盤板厚:4.0 mm)

- ① 各機種の埋込取付けパネルカット図(P.6)に従って、開口部を取付け面に加工してください。
- ② クーラから前面パネルを外してください。(下部 2 箇所ビス止め、上部は引っ掛け構造となっていますので、ビスを外した後、前面パネルを持ち上げるように外してください。)
- ③クーラに付属の取付ボルトを、上部2本取付けてください。
- ④パッキン貼付け図(P.6)に従って、クーラ本体の取付ボルトの外側全周に付属のパッキンを貼ってください。
- ⑤取付面(パネルカット)に合わせてクーラを盤内から設置してください。(ドレンパイプを避けるように設置してください。)
- ⑥盤外からクーラ下部へ2本取付ボルトを取付けてください。(OCA-S1000BC、S1600BCは4本取付けてください。)
- ⑦盤外から付属のワッシャ、ナットを取付け、固定してください。
- ⑧制御盤の気密性を確保する為に、必要に応じてシーリングを行ってください。
- ⑨前面パネルを取付けてください。
- ⑩付属の「アラーム説明シール」を見やすい位置へ貼付けてください。

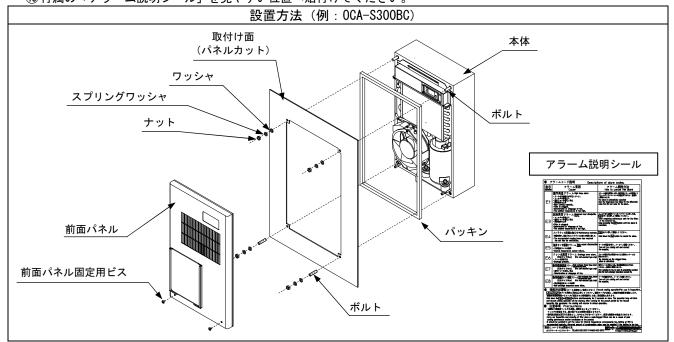







OCA-S1000BC、OCA-S1600BC は上面にアイボルト取付用ナットが2箇所あります。アイボルトを使用して吊り上げる場合には必ず2箇所を使用して均等に吊り上げてください。


1箇所のみで吊り上げるとクーラが故障、破損する可能性があります。

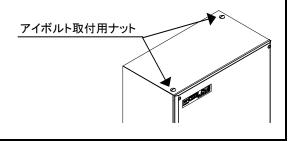


●盤外取付パネルカット図 <盤外から見た図>

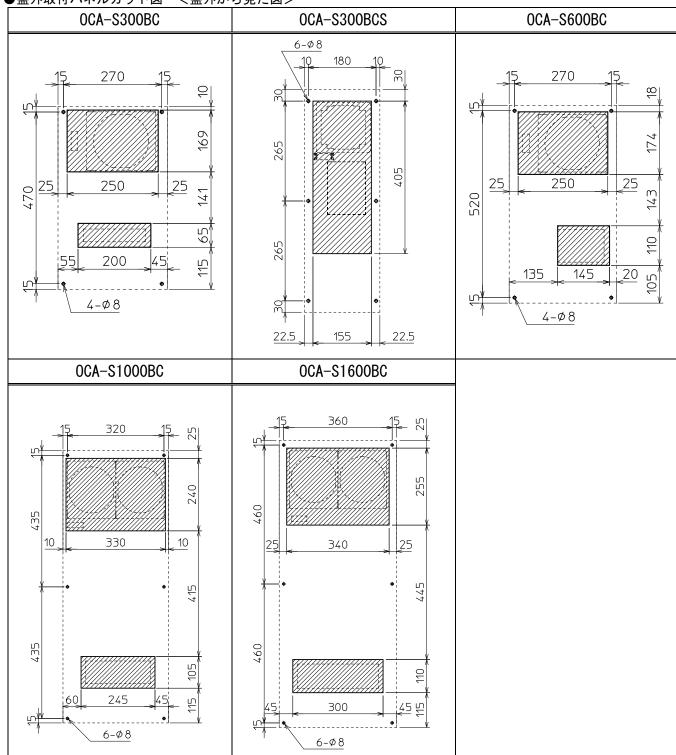

●埋込取付けパネルカット図

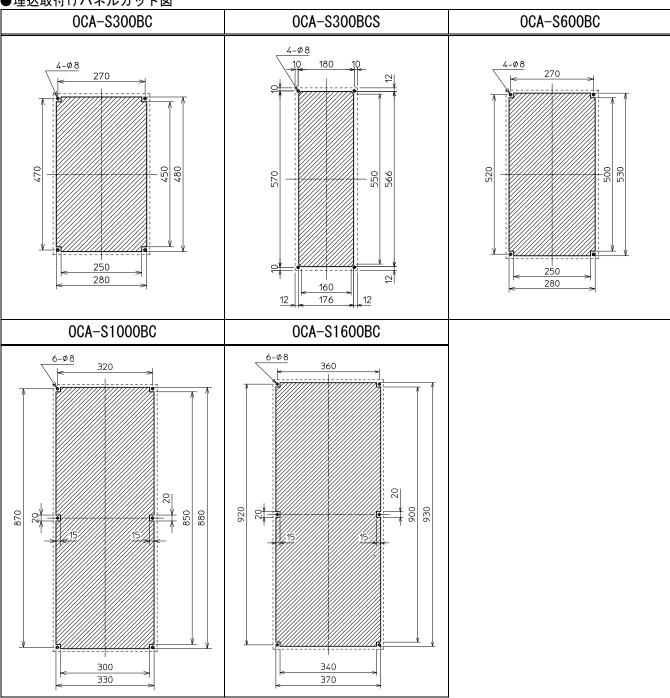

●パッキン貼付け図(例: 0CA-S600BC)

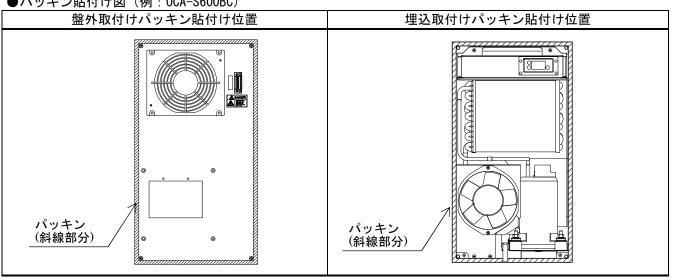


2-3 ドレンホースの取付け

クーラで除湿され発生した水は、ドレンホースを通して流れます。 ドレンホースは以下の注意点を守り、正しく取付けてください。

⚠ 注意

ドレン水がスムーズに排出されないとクーラ内の水受けからオーバーフローし、クーラ内または制御盤内に水が浸入するためドレンホースは正しく取付けてください。


- ・ドレンホースは折り曲げたり、巻いたりしないで必ず 直線になるように取付けてください。
- ・ドレンホースの先端は、曲げないでまっすぐ下に向けてください。
- ・ドレンパイプにドレンホースを差し込む際は抜けないように根元まで差し込んでください。 ドレンホースの先端とドレンパイプの接合部が緩い場合はホースバンドを使用し、確実な固定を行ってください。

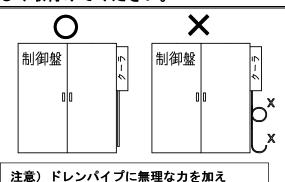

ないでください!




- ・ドレンホースの先端が必ずドレン水に浸からない長さにしてください。
- ・ドレン水があふれ出ないように湿度の高い日などは必ずこまめに捨てて ください。

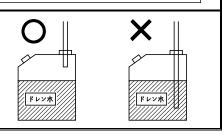


2-4 風向調整ルーバーを取付ける場合

風向調整ルーバーを取付けることにより、クーラの冷風を目的に応じた方向へ吐出することが可能となります。 ※風向調整ルーバーを付けた場合、能力が最大5%低下します。

- ※樹脂ルーバー先端部の回転調整時に固く感じる場合がありますが、外部影響(振動等)により回転・脱落をしないように勘合を固めにしています。
- ①直線性を主とした風向にする場合は、風向調整ルーバー本体のみ使用してください。 風向調整ルーバー本体の取付により、盤内ファン取付板面より盤内へ 40 mm突出します。

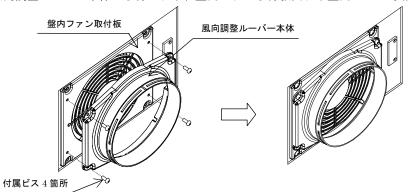

②風向に角度を付けたい場合は、風向調整ルーバー本体に先端部を取付け、先端部を回転させ風向きを調整してください。 先端部の羽根角度は約25°です。また、先端部の回転は45°間隔でロックが掛かるようになっています。 先端部の向きによってはショートサーキット(P.3)が発生する可能性がありますので、注意してください。 風向調整ルーバー本体と先端部の取付により、盤内ファン取付板面より盤内へ70mm突出します。

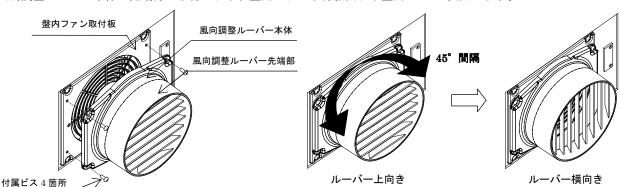


3. 配線

⚠ 注意




- ・クーラの設置は、設置する国の規則に従ってください。
- ・電圧は銘板の表示電圧に従ってください。
- ・クーラの許容電圧は表示電圧の±10%です。電圧変動時も許容電圧内におさまるよう、電源容量に注意してください。
- アース(E)は必ず接地してください。
- ・通電前に使用電圧、配線、接地に問題がないことを確認してから通電してください。
- 3-1 配線方法 (適合電線径 AWG24~12/0.2~2.5mm²)
- ① 電線の被覆を 6~7mm 剥いてください。
- ② マイナスドライバーにて端子台の「接続時押しボタンを押し込んでください。
- ③ 電線差込口に電線を差し込んでください。
- ④ マイナスドライバーを引いてください。
- ⑤ 電線が抜けないことを確認してください。
- ⑥ 圧着端子を使用する場合はフェニックス・コンタクト社製棒端子を使用してください。

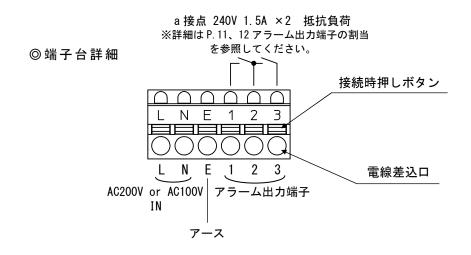

3-2 電気回路図 (例: 0CA-S1600BC)

※機種によりファンの数が異なります。

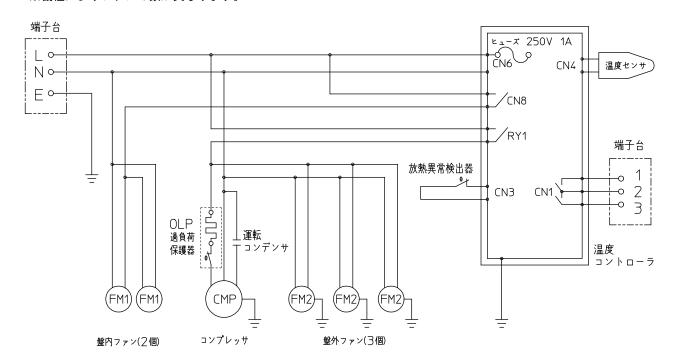

⚠ 注意




クーラ専用の漏電ブレーカを必ず取付けてください。

→ 専用の漏電ブレーカを入れないと、万が一漏電が発生した場合、制御盤自体の漏電 ブレーカがトリップしてしまいます。

ご使用のクーラに合わせて選定してください。

- ・クーラは電源投入時および冷却動作開始時に約1秒間の始動電流が流れます。この 始動電流に誤動作することがなく、その後の過電流を遮断するブレーカを選定して ください。
- ・漏電ブレーカの定格感度電流は30mAを目安にしてください。

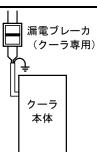

4. 運転

4-1 運転に関するご注意

⚠ 注意

クーラを設置後、コンプレッサの保護のため、必ず30分以上経過してから通電、運転を開始してください。

コンプレッサの頻繁な ON/OFF は、故障の原因になり寿命を短くします。




1時間に6回以上コンプレッサのON/OFFを繰り返す様な運転は絶対しないでください。 頻繁なON/OFFが起こる場合は、P.10パラメータ設定のディファレンシャルの設定値を大きくして ください。

クーラの本体内に指を入れる事や、カバーを外したままでの運転は絶対しないでください。 →ケガの原因となります。

制御盤の扉を開放したままで、クーラの運転は絶対にしないでください。

→異常な結露および異常なドレン水の発生を招きます。また盤内に結露水が入る可能性があります。

4-2 操作パネル

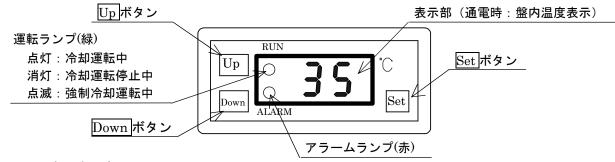

4-3 設定温度の変更

⚠ 注意



設定温度は+35℃を基本とし、むやみに設定温度を下げないでください。

異常な結露および異常なドレン水の発生をまねきます。

- ①クーラの電源を投入してください。(表示部に現在の盤内温度が表示されます。)
- ② Set ボタンを押してください。(現在の設定温度が点滅にて表示されます。)
- ③ Up、Down ボタンにて、ご希望の設定温度に変更してください。(初期設定:35℃ 設定温度範囲:30~45℃)
- ④ Set ボタンを押してください。(設定温度が変更され、盤内温度表示に戻ります。)

4-4 強制冷却運転 (クーラ点検時等にご使用ください。)

|Up |ボタンと |Down |ボタンを同時に3秒以上押してください。

正転ランプが点滅し強制冷却運転を開始します。強制冷却運転時間パラメータで設定された時間動作した後、通常運転に戻ります。(強制冷却運転時間の初期設定は30秒です。)

4-5 パラメータ設定 通常、パラメータは設定を変更する必要はありませんが、変更の必要がある場合には下記の方法で変更してください。 〇現在の盤内温度が表示されている状態から、Set ボタンを3秒以上押してください。 以下の順序でパラメータが表示されます。Set ボタンを押すことにより、次パラメータへ移動します。変 更したいパラメータを表示させ、Up ボタン・Down ボタンで設定値を変更し、Set ボタンを押すことによっ てパラメータの変更が決定されます。 ・ディファレンシャル[表示: d F] 初期設定:5℃ 設定範囲:3~10℃ dF 説明: (設定温度-ディファレンシャル)の温度に達した場合、コンプレッサが停止します。 注意: このパラメータを変更する際には、1時間に6回以上コンプレッサが ON ∕ OFF を繰り返さ ない様な設定温度およびディファレンシャルにしてください。 • 強制冷却運転時間[表示: C d] 初期設定: 30 秒 設定範囲: 0~90 秒 Ld Up Down ボタンを同時に3秒以上押したときに、強制冷却運転を行う時間です。 ・盤内高温アラーム温度[表示: AL] **初期設定:45℃** 設定範囲:35~51℃ 説明: 盤内高温アラームが発生する温度です。 ・盤内高温アラーム用ディファレンシャル[表示: d A] **初期設定:2℃** 設定範囲:1~20℃ 説明:盤内高温アラーム復帰用ディファレンシャルです。 (盤内高温アラーム温度-ディファレンシャル)の温度に達した場合、アラームが解除されま す。 ・メンテナンスお知らせ機能[表示: FI] **初期設定:0** 設定範囲:0~99 説明:メンテナンスの時期をお知らせする機能です。 0 : メンテナンスお知らせ機能を使用しない。 1~99· 1 を 100 時間としメンテナンス時期をお知らせします。 (制御基板内部では、1時間単位にて時間をカウントしています。) 例:99 設定⇒電源投入後 9900 時間後にメンテナンス時期をお知らせします。 (24 時間稼働の機械で約 412 日後) ・電源投入時に強制冷却運転の動作設定[表示: CS] 初期設定:0 設定範囲:0、1 説明:クーラの電源投入時に、強制冷却運転を行うかを設定します。 0:電源投入時に強制冷却運転しない。 1:電源投入時に強制冷却運転する。 ・放熱異常時の冷却運転復帰方法の設定[表示:Pr] **初期設定:0** 設定範囲:0、1 説明:放熱異常アラーム発生時の復帰方法を設定します。 0:手動復帰(アラーム解除方法は P.15「5-1(2)」を参照してください。) 1:自動復帰(アラーム解除方法は P. 15「5-1(2)」を参照してください。) 注意:自動復帰に設定した場合、冷凍回路内の放熱異常検出器が復帰すると冷却運転を再開し ますが、接点出力およびアラームコード表示はリセットされません。 放熱異常の原因が解消されないまま自動復帰を繰り返すと、クーラが故障する原因とな りますので、お早めにメンテナンスを行ってください。 ・メンテナンスお知らせ機能の出力設定[表示: Fo] **初期設定:1** 設定範囲:0、1 Fo 説明:メンテナンスお知らせ時間に達した時、アラーム出力端子で OPEN・CLOSE 切替えの有無を 設定します。出力端子の OPEN・CLOSE は次ページのアラーム出力端子の割当表を参考にし てください。 0: 切替えをしない。 1: 切替えをする。 ※0に設定した場合、メンテナンスお知らせ時間になってもアラーム出力端子からは出力 されません。ただし、表示パネルにはE4と表示されます。 ・アラーム出力端子の割当設定[表示: AS] **初期設定:0** 設定範囲:0~3 85 説明:アラームを検出すると、アラーム出力端子から出力されます。アラーム発生時のアラーム出 力端子の割当を設定することができます。 0:アラーム出力の監視 1:冷却動作とアラーム出力の監視 2: アラーム出力時、電源再投入の必要性の監視

※アラーム出力端子の割当設定の詳細はP11、12を参照してください。

3:アラーム発生時、冷却運転継続の監視

・アラーム出力端子の切替方法の選択[表示:Ao] **初期設定:0** 設定範囲:0、1 8o 説明:出力端子のOPEN・CLOSEの切り替えを反転させることができます。 0:アラーム出力端子の割当設定の通りに出力されます。 1:0の時と逆の動作をします。ただしAS:1の時、端子2-3間には働きません。 ※アラーム出力端子の割当設定の詳細は P.11、12 を参照してください。 ・運転モードの設定[表示: r M] **初期設定:1** 設定範囲:0~3 $r \Pi$ 説明:クーラの運転モードを設定します。 0:連続運転 1:省エネ運転① ※運転モードの詳細は P. 13、14 を参照してください。 2:省エネ運転② 3:省エネ運転③ ・省エネ運転③の冷却運転時間の設定[表示: t 1] **初期設定:7** 設定範囲:7~60分 説明:省エネ運転③に設定した時の冷却運転時間を設定します。 ※ r M:3の時、表示されます。 ・盤外ファン・コンプレッサの停止時間の設定 [表示: t 2] **初期設定:3** 設定範囲:3~10 分 説明:コンプレッサが停止した後、再び動作できるまでの時間を設定します。コンプレッサの頻繁 な ON/OFF を防ぐ為、この間は設定温度以上でも冷却運転を開始しません。 ・ソフトウェアバージョンの表示[表示: Sn] 説明:コントローラのソフトウェアのバージョンを表示します。変更はできません。

〇設定が終了しましたら、Set ボタンを3秒以上押してください。現在盤内温度表示に戻り、設定が記憶されます。

〇パラメータ変更を行っているとき、30秒間ボタンを押さなかった場合は<u>設定が記憶されずに</u>盤内温度表示にもどります。 再度パラメータ変更を行う場合は、Set ボタンを3秒以上長押ししてください。

4-6 アラーム出力端子の割当

アラームを検出すると、アラーム出力端子から出力されます。アラーム発生時のアラーム出力端子を設定することで様々な動作の監視をすることができます。この設定はパラメータの AS と Ao を変更することで機能します。

<u>クーラの電源投入前は端子 1-2 間、端子 2-3 間がともに OPEN となっています。</u>

電源投入後、出力端子が切替るまでに0.8秒のタイムラグがあります。

(1) アラーム出力の監視[AS:0] 【初期設定】

各種アラームが発生した場合に出力が切り替わります。

(2) 冷却動作とアラーム出力の監視[AS:1]

冷却動作を行っている場合と各種アラームの発生した場合に出力が切り替わります。

(3) アラーム出力時、電源再投入の必要性の監視[AS:2]

各種アラームが発生した場合、解除に電源を再投入する必要があるアラームと、自動復帰または手動復帰により解除す るアラームを区別することができます。

(4) アラーム発生時、冷却運転継続の監視[AS:3]

各種アラームが発生した場合に冷却運転を継続するアラームと、停止するアラームで区別することができます。

アラーム出力端子の割当表[Ao:0]

AS	クーラの	状態	端子 1-2 間	端子 2-3 間	機能
0	通常運輸	CLOSE	OPEN	マニー・八山土の監視	
0	各種アラーム	出力 ON	OPEN	CLOSE	アラーム出力の監視
	公 扣動 <i>作</i> 由	各種アラーム出力 ON	CLOSE	CLOSE	
1	冷却動作中 	各種アラーム出力 0FF	OPEN	CLOSE	冷却動作と
'	ハ +n チト /b /= .l _ 上	各種アラーム出力 ON	CLOSE	OPEN	アラーム出力の監視
	冷却動作停止中 	各種アラーム出力 0FF	OPEN	OPEN	
	E1, E3, E4*アラーム出力 0N	E5, SE アラーム ON	CLOSE	CLOSE	~- / III + n+
2		E5, SE アラーム 0FF	OPEN	CLOSE	アラーム出力時、電源再投入の
2	E1, E3, E4*アラーム出力 0FF	E5, SE アラーム ON	CLOSE	OPEN	
	E1, E3, E4*アラーム出力 UFF	E5, SE アラーム 0FF	OPEN	OPEN	必要性の監視
	E1, E4*アラーム ON	E3, E5, SE アラーム ON	CLOSE	CLOSE	
3	LI, L4* })—A UN	E3, E5, SE アラーム 0FF	OPEN	CLOSE	アラーム出力時、
3	E1 E4+7= / OEE	E3, E5, SE アラーム ON	CLOSE	OPEN	冷却運転継続の監視
	E1, E4*アラーム 0FF E3, E5, SE アラー		OPEN	OPEN	

※E4 アラームは Fo(P. 10): 0の時、出力されません。

アラーム出力端子の割当表[Ao:1]

AS	クーラの	状態	端子 1-2 間	端子 2-3 間	機能
0	通常運輸	OPEN	CLOSE	マニー・リカの監視	
U	各種アラーム	、出力 0N	CLOSE	OPEN	アラーム出力の監視
	冷却動作由	各種アラーム出力 ON	OPEN	CLOSE	
1	冷却動作中 	各種アラーム出力 0FF	CLOSE	CLOSE	冷却動作と
'	冷却動作停止中	各種アラーム出力 ON	OPEN	OPEN	アラーム出力の監視
		各種アラーム出力 0FF	CLOSE	OPEN	
	E1, E3, E4*アラーム出力 0N	E5, SE アラーム ON	OPEN	OPEN	→ - / .ll + n+
2		E5, SE アラーム 0FF	CLOSE	OPEN	アラーム出力時、
2	[1 [2] [4] [2] [/ 山土 OFF	E5, SE アラーム ON	OPEN	CLOSE	電源再投入の 必要性の監視
	E1, E3, E4*アラーム出力 0FF	E5, SE アラーム 0FF	CLOSE	CLOSE	必安任の無忧
	54 54 4 00	E3, E5, SE アラーム ON	OPEN	OPEN	
3	E1, E4*アラーム ON	E3, E5, SE アラーム 0FF	CLOSE	OPEN	アラーム出力時、
3	E1, E4*アラーム 0FF	E3, E5, SE アラーム ON	OPEN	CLOSE	冷却運転継続の監視
	LI, L4* / J—A UFF	E3, E5, SE アラーム 0FF	CLOSE	CLOSE	

※E4 アラームは Fo(P. 10): 0 の時、出力されません。

4-7 運転設定

クーラは通電を開始すると、各運転モードで動作します。

初期設定ではクーラの設定温度 35℃、ディファレンシャル 5℃に設定してあります。

したがって、制御盤内の温度が35℃でコンプレッサが動作、冷却を開始し、30℃で停止します。


運転モードは、連続運転、省エネ運転①、②、③の4モードから選択することができます。

運転の際の共通注意事項は以下となります。

- ・通電開始時に盤内の温度が盤内高温アラーム温度以上の場合には、AS、Aoの設定により、P. 12 のアラーム出力端子の割当表に従って、アラームランプが点灯します。
- ・冷却動作が停止してから一定時間(初期設定:3分)は、制御盤内の温度が設定温度まで上昇しても冷却動作を行いません。


(1) 連続運転

盤内の温度が設定温度で運転し、ディファレンシャル温度で盤外ファン・コンプレッサが停止します。 盤内ファンは常時動作します。()内の表示は初期設定です。

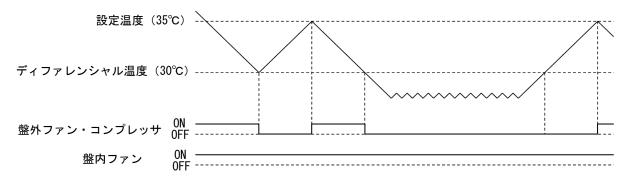

(2) 省エネ運転①【初期設定】

盤内の温度がディファレンシャル温度よりも低くなると盤内ファンが30分に1回、30秒間の送風運転を行います。この動作を行うことによって制御盤内の熱だまりを防止することができます。冬場など冷却運転をしていない場合、盤内ファンが間欠運転となることで省エネとなります。()内の表示は初期設定です。

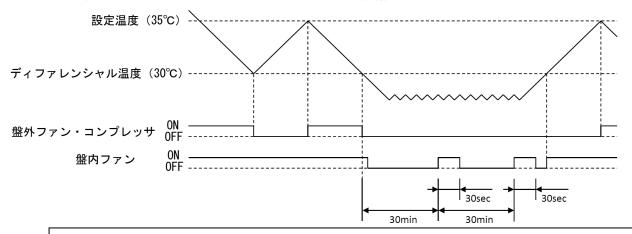


【注意】・盤内ファンは冷凍回路保護のため、冷却動作停止してから5分後に停止します。

・盤内の温度がディファレンシャル温度以上になると盤内ファンは連続動作します。

(3) 省エネ運転②

盤内ファンの動作が冷却動作と連動します。


冬場など冷却運転をしていない場合、盤内ファンは停止することで省エネとなります。()内の表示は初期設定です。

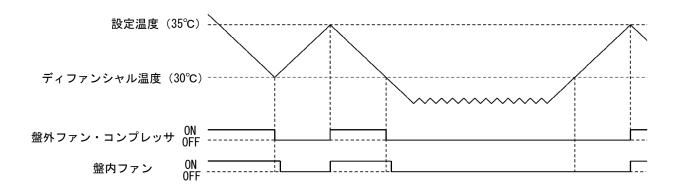

- 【注意】・盤内ファンが停止する事で空気が循環されないことにより、局所的な温度上昇(熱だまり)が発生する可能性があります。
 - ・盤内ファンは冷凍回路保護のため、冷却運転停止してから5分後に停止します。

(4) 省エネ運転③

盤内温度が設定温度以下になるがディファレンシャル温度まで下がらない場合に、冷却動作時間と停止時間を設け、一定のサイクルでON・OFFする事により、省エネとなります。パラメータ設定 t 1 t 2 t 2 t 2 t 2 t 2 t 2 t 2 t 2 t 2 t 2 t 2 t 3 t 2 t 3 t 3 t 6 t 6 t 6 t 7 t 7 t 8 t 9 t

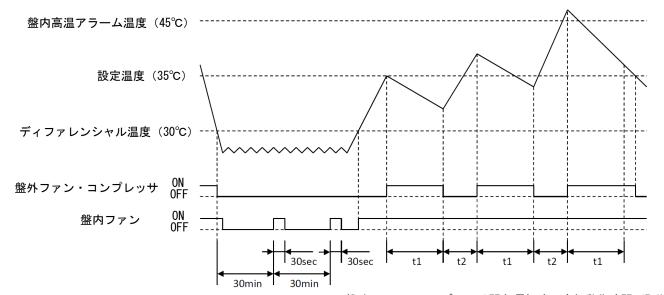

- ※盤外ファン・コンプレッサ間欠運転時の冷却動作時間(7分)
 - ※盤外ファン・コンプレッサの停止時間(3分)
- 【注意】・コンプレッサを一定時間で強制的に動作停止させる為、盤内温度が設定温度よりも高くなる場合があります。
 - また、盤内発熱量が大きい場合、盤内温度が盤内高温アラーム温度以上になる場合があります。
 - ・盤内温度の過上昇防止のため、設定した冷却動作時間で設定温度まで下がらない場合は、盤内温度が設 定温度より低くなるまで冷却動作を継続します。
 - ・盤内ファンは冷凍回路保護のため、冷却動作停止してから5分後に停止します。
 - ・盤内の温度がディファレンシャル温度以上になると盤内ファンは連続動作します。

5. アラーム・安全機能

5-1 アラーム

(1) E1: 盤内高温アラーム

盤内温度が 45° C (初期設定) になると、アラーム出力端子が A S 、 A o の設定により (P. 12 のアラーム出力端子の割当表参照) 出力する時、アラームランプが点灯します。表示部には現在の盤内温度と E1 が交互に表示され、盤内温度の高温をお知らせします。この時、冷却運転は停止しません。

盤内の温度が 43°C(初期設定)以下になると、アラームランプは消灯し、表示部には盤内温度のみが表示されます。

(2) | **E3** : 放熱異常アラーム

フィルタやフィンの目詰まり、ファンモータの故障等によりクーラが放熱異常状態になると、冷凍回路内の放熱異常検出器が作動し、冷却運転を停止させます。この時アラーム出力端子がAS、Aoの設定により(P. 12 のアラーム出力端子の割当表参照)出力する時、アラームランプが点灯します。表示部には現在の盤内温度とE3が交互に表示され、放熱異常をお知らせします。

フィルタやフィンの清掃およびファンモータの交換を行った後、温度コントローラの Set ボタンを 3 秒以上長押しして、アラームを解除してください。クーラは通常運転を再開します。

(3) **E4**:メンテナンスお知らせ機能

クーラの積算運転時間が、設定されたメンテナンスお知らせ時間に達すると、アラーム出力端子がAS、Ao、Foの設定により(P. 12 のアラーム出力端子の割当表参照)出力する時、アラームランプが点灯します。現在の盤内温度とE4を交互に表示して、メンテナンス時期をお知らせします。この時、冷却運転は停止しません。

フィルタなどのメンテナンスをおこなった後、Set ボタンを押してアラームを解除してください。

メンテナンスお知らせ時間の設定を変更した場合は、それまでの積算時間はリセットされ1時間よりカウントされます。

(4) **E 5**: 温度センサ断線アラーム

何らかの原因で内部温度センサが断線した場合は、冷却運転を停止させます。アラーム出力端子がAS、Aoの設定により (P.12のアラーム出力端子の割当表参照) 出力する時、アラームランプが点灯します。表示部には E5のみが表示されます。 クーラの電源を切り、メーカにご連絡ください。

(5) **E8**: タイプエラー メーカにご連絡ください。

(6) **SE**: システムエラー

メモリの故障により、パラメータの設定値が正しく読み込めない時に発生します。表示部にはSEのみが表示されます。 クーラの電源を切り、メーカにご連絡ください。

5-2 安全機能

本製品の安全機能として、異常電流や異常温度では運転を停止します。

その時、アラームはE1、またはE3が発生します。

6. メンテナンス

⚠ 注意



メンテナンスを行う時は、必ずクーラの電源を OFF にしてから作業を行ってください。

フィルタを交換する際は、弊社指定のフィルタを使用してください。

→目の細かなフィルタを使用すると、放熱効率が下がり、冷却能力の低下・故障の原因になります。



子供にクリーニングやメンテナンスの作業をさせないでください。

高圧洗浄機等を使用しての清掃はしないでください。

クーラの冷媒回路は製造時に必要な量の冷媒で満たされ、さらにリークテストおよびテスト運転をして出荷していますので、冷 媒回路のメンテナンスの必要はありません。


空気が汚れている環境でフィルタを使用している場合は、1週間に1度以上は点検・清掃をしてください。フィルタの目詰まりにより冷却能力が低下します。また最悪の場合、コンプレッサに負荷が掛かり、クーラが停止します。

6-1 フィルタのメンテナンス

前面パネルのガイドよりフィルタを抜き出し、清掃・交換を 行ってください。

◎交換用フィルタ

フィルタ型式	適用機種
CF-S1 (2枚入り)	OCA-S300BC, OCA-S300BCS, OCA-S600BC
CF-S2 (2枚入り)	0CA-S1000BC
CF-S3 (2枚入り)	OCA-S1600BC

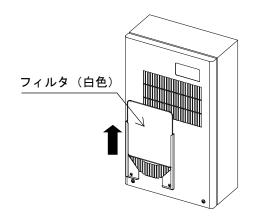


6-2 盤外ファンの交換 (例: 0CA-S600BC)

盤外ファンが故障したときは、以下手順でファンの交換を行ってください。

- ① クーラの電源を切ってください。
- ② 前面パネルを取り外してください。(ビス2箇所)
- ③ 右図の盤外ファンを固定しているビスを2箇所取り外してください。
- ④ ファンコード、アース線、ファン端子部分の絶縁ゴムをはずし、 ファンを取り外して交換してください。
- ⑤ 取り外した逆の手順でファンをクーラへ取付けて下さい。
 - ※ ファンコードの挟み込みには注意してください。
 - ※ ファン端子部分の絶縁ゴムは必ず入れてください。

交換用ファンの型式は(P.17)参照。

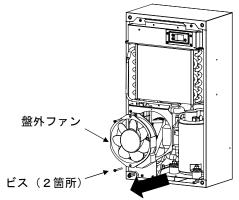


6-3 盤内ファンの交換 (例: 0CA-S600BC)

盤内ファンが故障したときは、以下手順でファンの交換を行ってください。

- ① クーラの電源を切ってください。
- ② 右図の盤内ファン取付板を固定しているビスを4箇所取り外してください。 (機種により固定位置が異なります。)
- ③ 盤内ファン取付け板を取り外してください。
- ④ ファンコードをはずし、ファンを交換してください。
- ⑤ ファンコードを差し込んだ後、取り外した逆の手順で盤内 ファン取付板をクーラへ取付けて下さい。
 - (※ ファンコードの挟み込みには注意してください。)

交換用ファンの型式は(P. 17)参照。

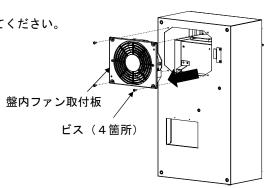

◎交換用ファン

適用機種	盤内ファン型式	盤外ファン型式
0CA-S300BC-A200	FM-300BCIN-200V	FM-300BC0UT-200V
0CA-S300BCS-A200	FM-300BCSIN-200V	FM-300BCS0UT-200V
0CA-S600BC-A200	FM-600BCIN-200V	FM-600BC0UT-200V
0CA-S1000BC-A200	FM-1000BCIN-200V	FM-1000BC0UT-200V
0CA-S1600BC-A200	FM-1600BCIN-200V	FM-1600BC0UT-200V
0CA-S300BC-A100	FM-300BCIN-100V	FM-300BC0UT-100V
0CA-S600BC-A100	FM-600BCIN-100V	FM-600BC0UT-100V
0CA-S1000BC-A100	FM-1000BCIN-100V	FM-1000BC0UT-100V
0CA-S1600BC-A100	FM-1600BCIN-100V	FM-1600BC0UT-100V

6-4 このような時には

現象	原因	対策
・盤内温度が上がりすぎる。	a. ブレーカが切れている。	a. ブレーカをONにしてください。
・冷風が出ない。 ・盤内高温アラーム(E1)	b. 設定温度より盤内温度が低い。	b. 設定温度と盤内温度を確認してくだ さい。
放熱異常アラーム(E3) を表示している。	c. 設定温度に冷却能力が追い付かない。	c. 設定温度を上げてください。 またはクーラを冷却能力が大きい物 に換えてください。
	d. 周囲温度が高すぎる。	d. 周囲温度が+50℃以上の環境では使 用できません。
	e. 盤内温度が高すぎる。	e. 盤内温度が+45℃以上での使用はで きません。
	f. フィルタが汚れている。	f. フィルタを清掃してください。
	g. 盤外ファンが回っていない。	g. 設定温度と盤内温度を確認してください。 ファンが故障している場合にはファンを交換してください。
	h. 盤内ファンが回っていない。	h. P.9 強制冷却運転にて盤内ファンが 回転するか確認してください。 回転しない場合は、ファンを交換して ください。
	i. ショートサーキットがおきている。	i. P.3 を参考に、ショートサーキットを 改善してください。
・盤内温度が下がりすぎる。	a. 設定温度を下げすぎている。 b. 内部回路または温度センサの故障。	a. 設定温度を上げてください。 b. メーカにご連絡ください。
・除湿する水が多い。	制御盤の気密性が悪い。	制御盤の隙間を埋めて、気密性を上げて
		ください。
E5を表示している。	内部温度センサの故障。	メーカにご連絡ください。
E8を表示している。	_	メーカにご連絡ください。
・SEを表示している。	メモリの故障	メーカにご連絡ください。

[・]使用中に異常が生じた場合には使用するのをやめ、電源を OFF にしてメーカにご相談ください。 なお、ご相談される場合には、クーラの型式およびご購入時期をお知らせください。

6-5 簡易点検方法について

フロン排出抑制法では、圧縮機の電動機出力が 7.5kW 未満の第1種特定製品については、3 か月に1回の簡易点検が義務付けられています。

簡易点検の方法は、冷却運転中または強制冷却運転(P9. 4-4強制冷却運転を参考)を行って、盤内冷気吐き出し口より冷風が出ていることを確認してください。

7. 仕様

7-1 標準仕様

標準 AC200V タイプ

型式		0CA-S300BC -A200	0CA-S300BCS -A200	0CA-S600BC -A200	0CA-S1000BC -A200	0CA-S1600BC -A200
冷却能力	※ 1	250/300W	280/300W	500/610W	800/1000W	1450/1600W
定格電	圧		単	相 AC200V 50/60	Hz	
出弗爾法 ♥0	定格	1.5/1.4A	1. 4/1. 2A	2. 1/2. 0A	3. 4/3. 7A	4. 3/4. 5A
消費電流 ※2	最大	1.6/1.6A	1. 5/1. 5A	2. 4/2. 7A	4. 5/4. 7A	4. 9/5. 6A
始動電流		3. 8/3. 7A	3. 5/3. 4A	5. 9/5. 7A	12.5/11.9A	14. 4/13. 8A
出弗爾士 ♥0	定格	260/270W	235/235W	380/400W	635/735W	795/895W
消費電力 ※2	最大	295/315W	275/290W	460/530W	800/905W	925/1110W
圧縮機 電動	動機出力	10	100W 250W		400W	470W
騒音(A st	持性)	65dB	61dB	65	dB	68dB
冷媒	種類、名称		HFC R134a		HFC F	R407C
	封入量	100g	130g	170g	400g	450g
地球温暖化係数			1430		1770	
外形寸法 W×I	H×D (mm)	300 × 500 × 150	200 × 590 × 200	300 × 550 × 200	350 × 900 × 200	390 × 950 × 220
本体質	ī量	約 16.0kg	約 14. 0kg	約 18.0kg	約 33. 0kg	約 36.0kg

ボトムフロータイプ

1 /					
<u>.</u>	0CA-S300BC-A200-R	0CA-S600BC-A200-R	0CA-S1000BC-A200-R	0CA-S1600BC-A200-R	
 *1	240/290W	440/550W	720/920W	1290/1440W	
圧		単相 AC20	0V 50/60Hz		
定格	1. 5/1. 3A	2. 1/2. 1A	3. 5/3. 6A	4. 2/4. 3A	
最大	1. 6/1. 6A	2. 4/2. 7A	4. 2/4. 4A	4. 9/5. 5A	
流	3. 8/3. 7A	5. 9/5. 7A	12. 5/11. 9A	14. 4/13. 8A	
定格	255/260W	380/405W	635/715W	770/860W	
最大	290/305W	455/525W	775/850W	930/1090W	
助機出力	100W	250W	400W	470W	
寺性)		65dB	67dB		
種類、名称	HFC R	HFC R134a		R407C	
封入量	100g	170g	400g	450g	
化係数	143	30	1770		
H×D (mm)	300 × 500 × 150	300 × 550 × 200	350 × 900 × 200	390 × 950 × 220	
量	約 16.0kg	約 18.0kg	約 33.0kg	約 36. 0kg	
	※1 注E 定格 最大 流 定格 最大 动機出力 特性) 種類、名称 封入量 化係数	OCA-S300BC-A200-R ※1 240/290W ②	OCA-S300BC-A200-R	OCA-S300BC-A200-R	

標準 AC100V タイプ

型式		OCA-S300BC-A100	0CA-S600BC-A100	0CA-S1000BC-A100	OCA-S1600BC-A100	
冷却能力	ı ※ 1	250/300W	400/520W	750/900W	1300/1450W	
定格電	迁		単相 AC10	0V 50/60Hz		
当弗雷达 >>0	定格	3. 1/2. 6A	4. 1/3. 9A	7. 8/8. 1A	8. 9/9. 2A	
消費電流 ※2 	最大	3. 3/3. 1A	5. 1/5. 3A	10. 5/9. 8A	11. 2/11. 4A	
始動電	流	7. 0/6. 7A	11.8/10.6A	24. 3/20. 2A	26. 2/23. 8A	
当典電士 ♥2	定格	265/250W	365/385W	665/770W	805/890W	
消費電力 ※2 	最大	310/300W	475/530W	1065/995W	1200/1135W	
圧縮機 電	動機出力	100W	250W	400W	470W	
騒音(A:	持性)	65dB			68dB	
冷柑	種類、名称	HFC R	HFC R134a		R407C	
冷媒	封入量	140g	200g	410g	510g	
地球温暖化係数		14	1430 1770		70	
外形寸法 W×	H×D (mm)	300 × 500 × 150	300 × 550 × 200	350 × 900 × 200	390 × 950 × 220	
本体質	量	約 16. 0kg	約 18.0kg	約 33. 0kg	約 36. 0kg	

側面取付タイプ共通仕様

法	側面取付型		
度 ※3	+20°C∼+50°C		
湿度	85%RH 以下 結露無き事		
囲 ※3	+30°C~+45°C (初期設定:35°C)		
;	盤内温度、アラームコード/運転ランプ/アラームランプ		
	盤内高温異常検出、放熱異常検出、温度センサ断線検出 メンテナンス時期お知らせタイマー、点検時強制冷却運転機能		
力	アラーム出力 1a 240V 1.5A×2 出力(COMMON 共通)		
性	振動数 10~150Hz 加速度 1.0G 掃引サイクル 20 回		
級	内部循環 IP54 相当		
EMC 指令	EN61000-6-2、EN61000-6-4 準拠		
低電圧指令	EN60335-1, EN60335-2-40, EN62233		
環境対応	RoHS		
色	ベージュ(5Y7/1 相当)		
.一ズ定格	250V 1A		
	度 ※3 l湿度 囲 ※3 l h h t t t t t t t t t t t t t t t t t		

^{※1} 盤外温度および盤内温度が+35℃の場合の公称冷却能力です。

付属の風向調整ルーバーを付けた場合、能力が最大 5%低下します。


^{※2 「}定格」は盤外温度および盤内温度が+35℃の場合、「最大」は盤外温度+50℃、盤内温度が+35℃の場合の公称値です。

^{※3} 温度範囲外では使用できません。


7-2 梱包内容

**							
名称	OCA-S300BC	OCA-S300BCS	OCA-S600BC	OCA-S1000BC	0CA-S1600BC		
クーラ本体	1台						
取付ボルト	M6×35mm:4本	M6×35mm:6本	M6×35mm:4本	M6 × 35n	m:6 本		
ワッシャ	M6:4個	M6:6個	M6:4個	M6 :	6 個		
スプリングワッシャ	M6:4個	M6:6個	M6:4個	M6 :	6 個		
ナット	M6:4個	M6:6個	M6:4個	M6:6個			
パッキン		1 ロール					
ドレンホース			1本 (2m)				
端子台			1 個				
アラーム説明シール			1 枚				
取扱説明書		1 冊					
風向調整ルーバー	1個 ※	_	1個 ※	2 個	*		
風向調整ルーバー 取付用ビス	M4:4個 ※	_	M4:4個 ※	M4 : 8	個 ※		


[※] ボトムフロータイプ (型式の末尾に「-R」の付くクーラ) には、付属していません。

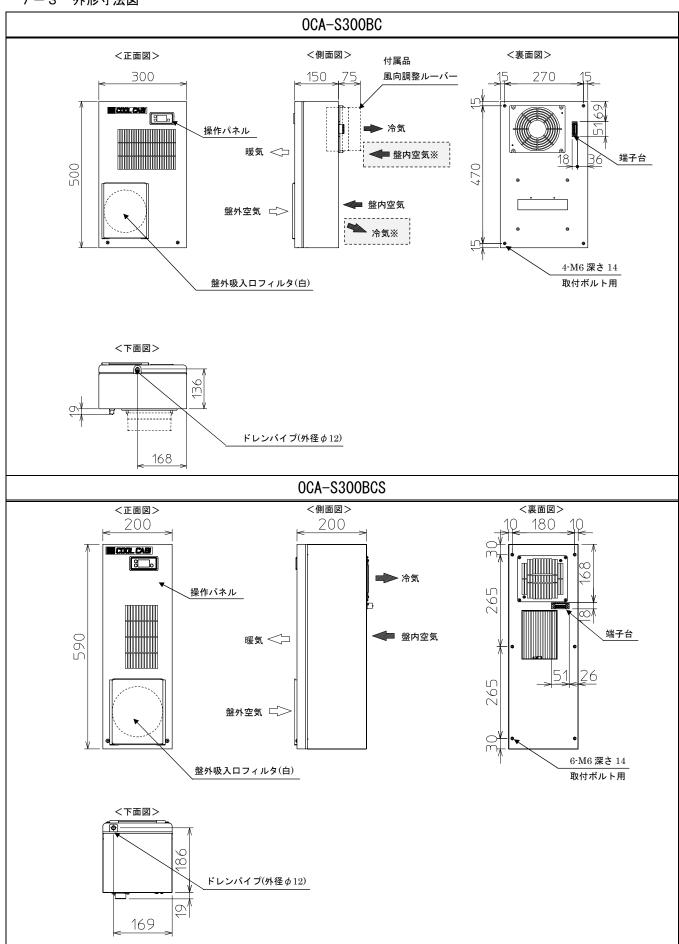

- ※ ボトムフロータイプ (型式の末尾に「-R」の付くクーラ)について
 - ・点線で囲った向きの風の流れとなり、標準タイプとは、制御盤内の風の向きが逆になります。
 - ・冷風吹出口に、水飛び防止メッシュが付きます。
 - ・風向調整ルーバーは、付属していません。

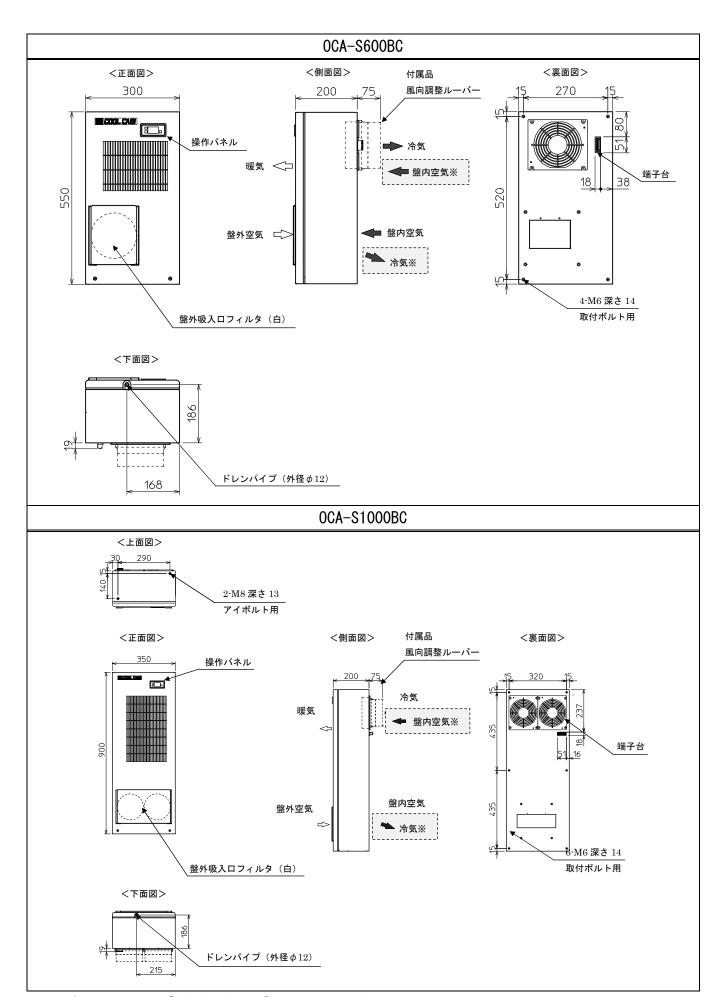

- ※ ボトムフロータイプ (型式の末尾に「-R」の付くクーラ)について
 - ・点線で囲った向きの風の流れとなり、標準タイプとは、制御盤内の風の向きが逆になります。
 - ・冷風吹出口に、水飛び防止メッシュが付きます。
 - ・風向調整ルーバーは、付属していません。

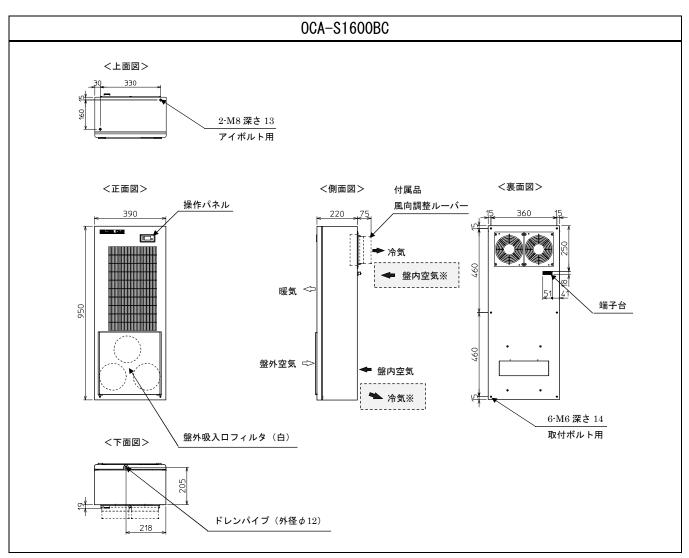

- ※ ボトムフロータイプ (型式の末尾に「-R」の付くクーラ)について
 - ・点線で囲った向きの風の流れとなり、標準タイプとは、制御盤内の風の向きが逆になります。
 - ・冷風吹出口に、水飛び防止メッシュが付きます。
 - ・風向調整ルーバーは、付属していません。

8. 保証期間

メーカ出荷後、1年間とします。

ただし、当社責任範囲外による故障は有償にて修理させて頂きます。

9. フロン回収について

盤用クーラには冷媒としてフロン類が使用されており、フロン回収・破壊法(平成 13 年 法律第 64 号)における第一種特定製品として扱われ、フロン類の回収が必要な場合には、改正フロン回収・破壊法(平成 19 年 10 月施行)に基づいた処理が必要となります。フロン回収・破壊法は、地球温暖化やオゾン層破壊の原因となるフロン類の大気中への排出を抑制するためのものですので、必ず守ってください。更に改正フロン回収・破壊法が改正されフロン排出抑制法(平成 27 年 4 月施行)として、所有者の管理責任が明記されております。

盤用クーラの管理及び廃棄に伴うフロン類の回収に関する注意事項と実施事項は下記の通りです。お分かりにならない時は、 メーカにお問い合わせください。

- ■地球環境を保護するため、次のことが法律で定められていますので、必ず守って下さい。
 - ・何人も、幋用クーラに封入されているフロン類をみだりに大気中に放出してはなりません。
- ■盤用クーラの所有者は、廃棄の際には、以下のことが必要になります。
 - ①都道府県知事の登録を受けたフロン類回収業者にフロン類を引き渡すこと。
 - ②その際には、法律に基づき書面を交付すること。
 - ③フロン類の回収、破壊等に必要な費用を負担すること。
- ■冷媒番号及び封入量は、盤用クーラ本体に貼ってある製品銘板に記載してあります。
- ■盤用クーラは特定家庭用機器再商品化法(家電リサイクル法)の適用商品ではありません。

口所有者の管理責任

■機器の点検

盤用クーラは、3か月に1回の定期点検が必要です。

- ■漏えい防止措置、修理しないままの充填の原則禁止 冷媒漏えいが確認された場合、可能な限り速やかに漏えい箇所の特定・必要な措置を実施する。 漏えいが確認された場合は、メーカまで速やかにご連絡下さい。
- ■点検等の記録

上記で行われた点検を含め、機器の修理、フロンガスの充填・回収の履歴を記録・保存します。 特に指定書式はありませんので、所有者の通常の点検記録簿に記入し保管下さい。 盤用クーラの修理、フロンガスの充填の必要がある場合は、メーカまでご連絡下さい。

10. 廃棄について

盤用クーラを廃棄するときは、充てんされているフロンを回収した後、「廃棄物の処理及び清掃に関する法律」に準拠し、必ず専門の産業廃棄物処理業者に委託して処理してください。



本社/カスタマーサービスセンター

〒431-1304 静岡県浜松市北区細江町中川 7000-21

第5版この取扱説明書の内容は2015年4月現在のものです。



RoHS (E

Instruction Manual

Lateral Mounting Type

OCA-S300BC

OCA-S300BCS

OCA-S600BC

OCA-S1000BC

OCA-S1600BC



Caution

Please read this brochure carefully before use and keep at hand for future reference.

≪Contents≫

1. Safety Precautions	2
2. Mounting	3-7
3. Wiring	8-9
4. Operation · · · · · · · · · · · · · · · · · · ·	9-14
5. Alarm/Safeguard · · · · · · · · · · · · · · · · · · ·	15
6. Maintenance · · · · · · · · · · · · · · · · · · ·	16-17
7. Specifications	18-23
8. Warranty period	24
9. Waste disposal	24



1. Safety precautions

- This product is an industrial cooling unit for control panel. Do not use this for any other purposes.
- Be sure to read these precautions carefully before starting operation for proper use.
- All the warnings and cautions described herein must be observed in order to use the product safely. The marks and their meanings shown in this manual are as follows.

<u> </u>	Improper handling is likely to lead to death or serious bodily injury.
A Caution	Improper handling is likely to lead to bodily injury and/or property damage.

The meanings of the symbols used in this brochure are as follows.

0	Means "Strict prohibition"	This is to drawn attention for "Rotating body"
<u>^</u>	This is to draw "Attention"	This is draw attention for "Electrical shock"
0	Means "Obligatory action"	



Danger



Never touch the terminal board while the cooling unit is energized.






Never remove the front cover of the unit during operation. Do not put your fingers or foreign matters into rotating part of the fan.

Always disconnect power and wait until the fans stop completely before starting work. Failure to them can result in injury.

This product is for indoor use only.

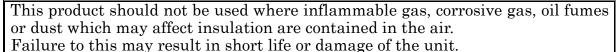



Shocks and vibrations should be strictly avoided at the site of use.

Never tamper or repair the main body.

Please consult with your local supplier for repairing service.

Disposal of refrigerant and oil sealed in the cooling circuit should be dealt with only by professional services.

Ensure smooth air circulation at the site of installation of the product.

Failure to this may degrade cooling performance of the unit.

Keep upright position during transportation without tilt.

Never transport it without dismounting from a control panel.



The atmosphere of the site of use should be within the temperature range from +20°C to 50°C and humidity range 85%RH or less free from condensation.

The product should not be placed sideways or upside down during storage. Storage temperature should not exceed +70°C.

Check for damage on packaging when the product is delivered.

Do not use the product if any damage is found. Any packaging damage may be a cause of malfunction.

Avoid using other filters than enclosed.

Use of fine filters will cause efficiency loss in heat releasing which leads to reduced cooling performance and/or breakdown of the unit.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

2-1 Caution



Danger



For prevention of electrical shock, power supply to the control panel should be disconnected before installation work.



Caution


For installation, do not use any parts other than originally supplied ones. Failure to this may result in injury or breakdown of the cooling unit.



In case screws are used for installation instead of the original bolts, put a plate between the screw and the cap nut so as the direct torque not to be transmitted. Or, the cap nut may cause slipping.

Cut out the mounting surface of the enclosure as specified in the drawing of page 8.

COOLCABI must be placed horizontally and perpendicularly within a tolerance of $\pm 2^{\circ}$ in order to keep stable operation of the unit and to make a smooth drainage.

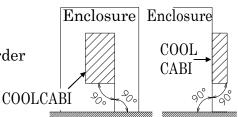




Locate the unit so as to assure good ventilation and distance of at least 200mm from the walls or other units.

Also, there should be no hindrance to the air


circulation inside the control panel. Failure to the above may result in poor cooling performance or condensation.

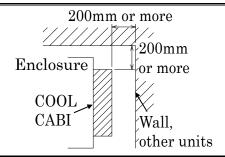

The supply voltage must be as specified on the rating plate of the unit.

Electrical connection should be made via appropriate circuit breakers as shown in the right.

Ground the wire without fail to prevent electrical shocks

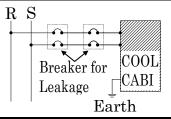

Electrical works required for installation of the unit must be done only by specialists.

Improper installation may result in electrical shocks or fires.

For protection of the compressor, wait at least 30 minutes after installation before connecting power to start operation.

Hermetically seal the control panel all round.

Inferior sealing may cause condensation which lead to poor cooling efficiency.


Put covers on the components inside the enclosure to protect them from cutting dust during installation work.

[Short circuit]



Electric components or other objects near the cool air outlet may disturb cool air circulation. If the cool air hit against them, it will directly return to the suction port without being distributed to the whole area in the enclosure. This causes not only troubles of the components but may negatively affect operation of the cooling unit which lead to overcurrent and product failure.


In case such short circuit is found during cooling operation, improve the environment by attaching rectifying plates or installing agitation fans as necessary.

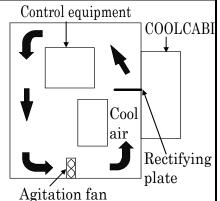


2-2 Mounting procedure

A. External mounting

- (1) Process the mounting surface to cut out the openings in accordance with the respective mounting cutout drawings in Page 5.
- (2) Fit the enclosed bolts to the unit. The number of bolts differs depending on the model.
- (3) Attach the enclosed packing on the rear side of the unit. Affix metallic packing outside the fixing bolts as shown in the drawing of Page 6.
- (4) Align the unit to fit the cutouts.
- (5) Fit the washers and the nuts from inside the control panel and secure them.
- (6) To ensure keep the panel interior airtight, caulk the gaps completely, if any.
- (7) Apply the enclosed "Alarm explanation sheet" to an appropriate place where readily visible.

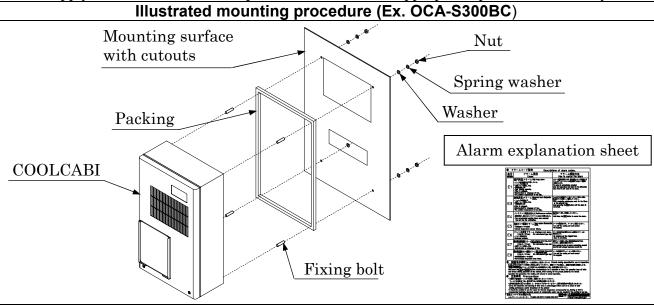


- B. Embedded mounting (Max. panel thickness: 4.0mm)
 - (1) Process the mounting surface to cut out the openings in accordance with the respective mounting cutout drawings in Page 6.
 - (2) Detach the front panel from the unit. As the panel is fixed with 2 screws on the lower side with its upper rim hanging on the main body, lift it up after removing the screws to release.
 - (3) Secure the enclosed 2 fixing bolts on the upper side.
 - (4) Attach the enclosed packing on the rear side of the unit. Affix metallic packing outside the fixing bolts as shown in the drawing of Page 6.
 - (5) Align the unit from inside the control panel to fit the cutouts. Positioning should be done so as to avoid the drain pipe.
 - (6) Secure 2 (4 for OCA-S1000BC and S1600BC) fixing bolts on the lower side from outside the enclosure.
 - (7) Fit the washers and the nuts from outside the control panel and secure them.
 - (8) To ensure keep the panel interior airtight, caulk the gaps completely, if any.
 - (9) Attach the front panel.
 - (10) Apply the enclosed "Alarm explanation sheet" to an appropriate place where readily visible.

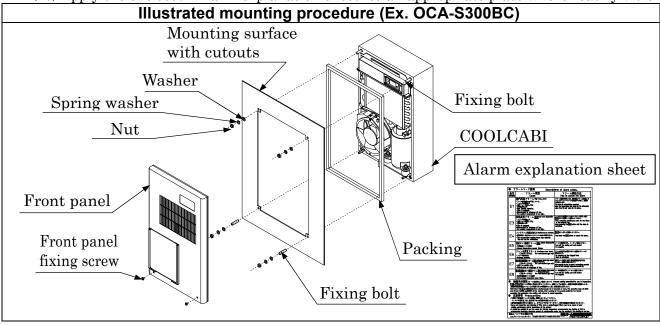


A Caution




OCA-S1000BC and OCA-S1600BC has two nuts on top for installation of eyebolts. Please lift up evenly using eyebolts whenever lifting up a cooling unit. Lifting up one side only may result in breakdown or damage of the product.

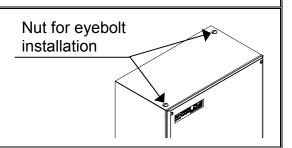


Cutouts for External Mounting < View from outside the panel>

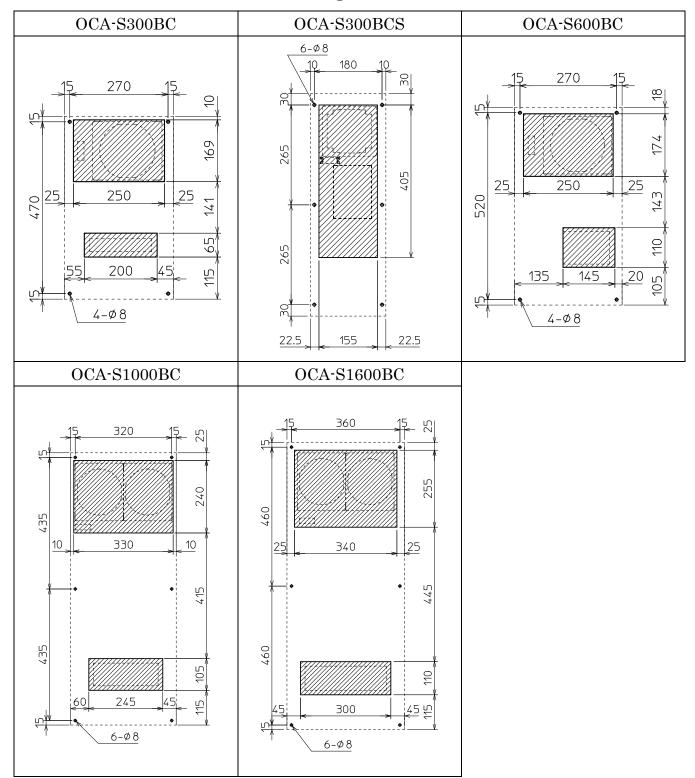

Cutouts for Embedded Mounting

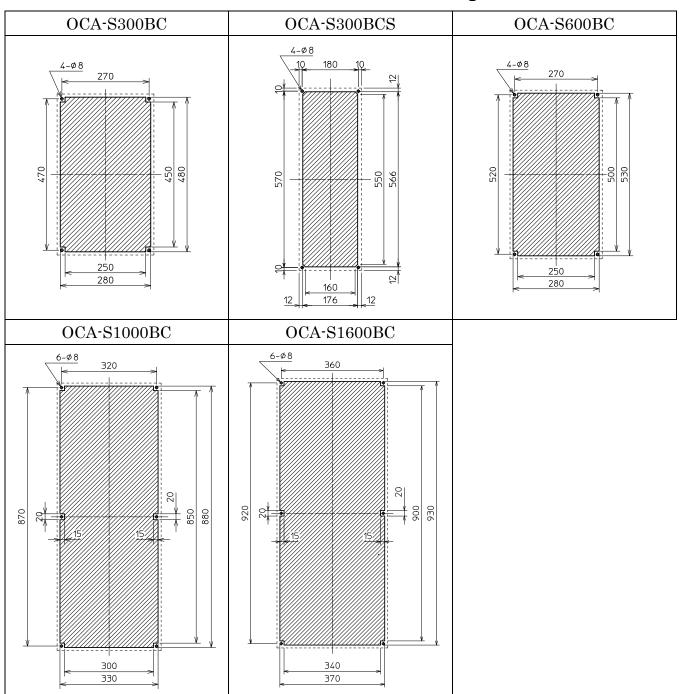

●Arrangement of packing (Ex. OCA-S600BC)

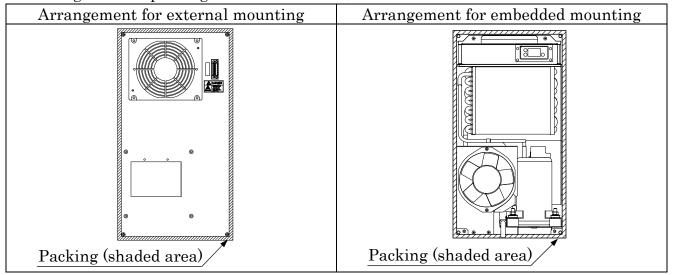

2-3 Attachment of drain hose


Moisture arisen from dehumidification by COOLCABI is discharged through a drain hose. Pay attention to the following notices in order to attach the drain hose properly.



Caution


If the drain hose is not attached properly, water collected in the drain pan inside the COOLCABI may overflow into the control panel interior.

- Let a drain hose go directly downward without kinks and windings..
- The free end of a drain hose should be directly downward without bending.
- To prevent a hose from coming off, insert it deep enough to a drain pipe.
- In case the joint of a drain hose and a drain pipe is not tight enough, use a hose band to fix the joint securely.

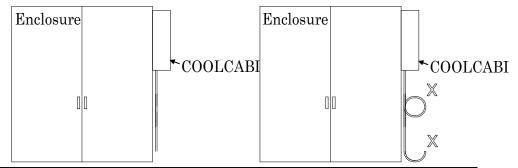

Attention: Do not put excessive force on drain pipe when working.

- Adjust the hose length so it end does not submerge in the container.
- Empty the container frequently especially on humid days.

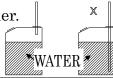

2-4 When Adjustable Louver is used


Attachment of the Adjustable Louver enable to direct output air to the desired direction.

Note: Cooling capacity may decrease up to 5% by using the louver.


To keep the set angle not to be affected by external impact including vibration, the base plate and the louver top is rather tightly fitted.

1) When straight wind is desired, use the base plate only. The head of louver base plate will protrude from the fan mounting surface by 40mm.

Internal fan mounting plate

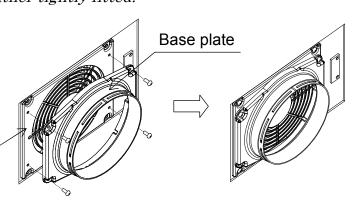

2) When angled wind is desired, attach the louver top on the base plate and adjust the direction by turning the louver top. The louver blades are angled at 25 degrees. The locking system of louver top works at every 45 degrees. Pay attention that short circuit can occur depending on the louver position.

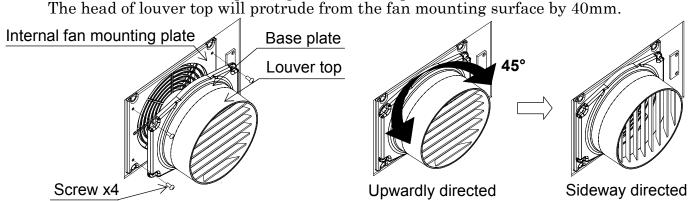


A Caution

- Please observe all the local regulations in installation of the cooler.
- Supply voltage should be as specified on the rating plate.
- Allowable power fluctuation is +/- 10% from the rated voltage. Pay attention the maximum fluctuation should be stayed within this range.
- Make sure that grounding has been properly done.
- Before electrifying the unit, make sure again that there is no problem in supply voltage,
- wiring connection and grounding.
- 3-1 Wiring procedure (Applicable wire range: AWG24 to 12 / 0.2 to 2.5mm²)
- (1) Strip the wire by 6 or 7 mm.
- (2) Push down the Push button with a flathead screwdriver.
- (3) Insert a wire into the port.
- (4) Release the screwdriver.
- (5) Check that the wire is secured.
- (6) For the application using crimp terminals, the bar terminals made by Phoenix Contact.


a contact, 240V 1.5A x2 resistance load

Note: For details, please refer to the paragraph 4-6 in page 11,12

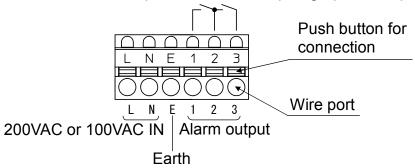

3-2 Circuit diagram (Ex. OCA-S1600BC)

*The number of fans differs according to the model.

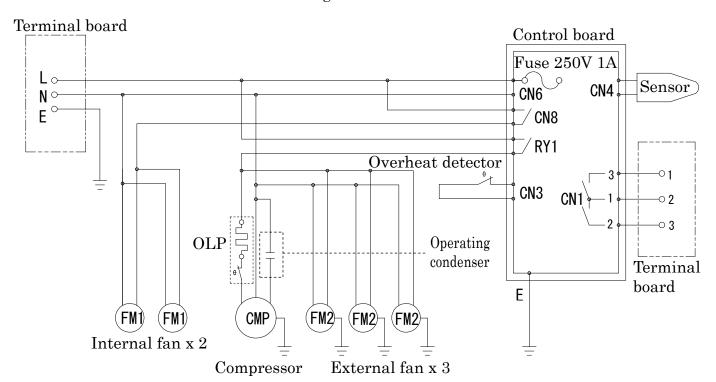



Caution




Do not forget to fit an earth leakage breaker.

→ Failure to this may lead to tripping of the earth-leakage breaker for the enclosure in the event of electric leakage.

Selection of a breaker should be made so as to fit the type of the cooler.

- a. With the input of power supply, or with the start of cooling operation, COOLCABI is subject to starting current for approx. 1 second. Therefore, the selection of an earth leakage breaker should be made so as to assure stable operation without affected by such current as well as providing effective protection against possible overcurrent thereafter.
- b. For earth leakage breakers, use a reference value of 30mA for sensitivity rating as a guide of selection.

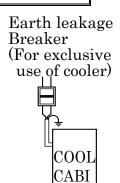

4. Operation

4-1 Caution



Caution

For protection of compressor, wait at least 30 minutes after installation of the unit and then turn on power to start operation.

Frequent switching on and off of a compressor may be a cause of trouble and shorten its lifetime. Never repeat ON/OFF more than 5 times within an hour. Turn up the differential value of the parameter setting (see Article 4 to 5) if frequent on-off occurs.

0

Never put your fingers into the unit or uncover the unit during operation. Failure to this may be a cause of injury.

Never operate COOLCABI leaving the control panel door open.

Failure to this may lead to excessive condensation and drainage volume as well as creating the possibility to allow condensate to enter into the control panel interior.

4-2 Operation panel

Display (Internal temp. indicated when power is on)


Operation lamp (Green)
Lighting: Operating

Lights off: Cooling operation is suspended Blinking: Compulsory operation is executed

ation is executed

DOWN button

UP button

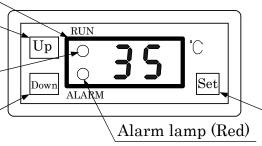

SET button

4-3 How to change the setting temperature



Caution



Setting temperature should be basically at 35°C. Avoid setting at an unnecessarily low value which may cause excessive condensation or drainage.

(1) Turn on the unit. The current internal temperature will be indicated on the display.

(2) Push the SET button. The current setting temperature will be flashed.

- (3) Change the setting temperature by UP and DOWN buttons within the range from 30°C to 50°C.
- (4) Push the SET button. The setting temperature has now been changed and the unit restarts operation.

4-4 Compulsory cooling operation (For inspection purposes)

Press UP and DOWN buttons at the same time for 3 seconds or more.

The operation lamp will light and the unit will start compulsory cooling operation. After a laps of the time set by parameter, the unit will return to normal operation mode. *Note: Factory setting for compulsory operation is 30 seconds.*

4-5 Parameter setting Normally, there is no need to change the setting of the parameters. If necessary, follow the procedures described below. Push the SET button for more than 3 seconds in a status that the internal temperature is indicated. The parameters are indicated in the following order. Press SET button to move to the next parameter. Display a parameter desired to be changed and set the value using UP and DOWN buttons. Set the parameter by pressing SET button. - Differential **Initial setting**: 5°C Setting range: 3 – 10°C d F This indicates the temperature difference against the setting temperature at which the compressor stops Caution: Setting of the temperature and the differential value should be made so as to avoid repetition of compressor's on/off operation of more than 5 times in an hour. Compulsory cooling operation time Initial setting: 30 sec Ld Setting range : 0 - 99 sec This indicates the time of compulsory operation time when UP and DOWN buttons are pressed for 3 seconds or more at the same time. - High Temp. Alarm setting Initial setting: 45℃ Setting range: 0 – 99°C This indicates the temperature at which High Temp. Alarm turns ON. - Differential for Alarm Initial setting: 2°C Setting range: 1-20°C This is a differential for setting High Temp Alarm. AL - dA =the temperature at which the alarm turns off - Maintenance-reminder **Initial setting: 0** Setting range: 0-99 This is the function to remind you maintenance works in a timely manner. 0: This function is ineffective 1-99: 1 means 100 hours. Notification period can be set between 100 to 9900 hours. *Time measurement in the control board is made on an hour basis. As an example, if this is set to 99, notification is made in 9900 hours after power input, which is nearly equivalent to 412 days for a unit in 24-hour operation. - Compulsory cooling operation setting at power input Initial setting: 0 or 1 This is to set the compulsory operation when power connection is made. 0 : Compulsory operation at power input is effective 1: Compulsory operation at power input is ineffective Setting for restoration method from abnormal heat radiation alarm. Pr **Initial setting:** 0 or 1 Select 0 or 1 for setting manual or auto restoration from abnormal heat radiation alarm. 0: Manual restoration 1: Automatic restoration Refer to "5. Alarm/Safeguard (2) in page 15" to clear the alarm.

of


Attention:
In case Auto restoration is selected, cooling operation will restart when

In case Auto restoration is selected, cooling operation will restart when the overheat detector in the refrigerant circuit is reset. However, the contact output and the alarm code indication will not be reset. Early maintenance is recommended. Repeated Auto restoration without solving the cause of problem may result in trouble of the product.

- Setting of maintenance timer Initial setting: 1 Setting: 0 or 1 Set the contact output behavior at the set time for notification of maintenance work.

0 : Contact output is ineffective

1 : Contact output is effective

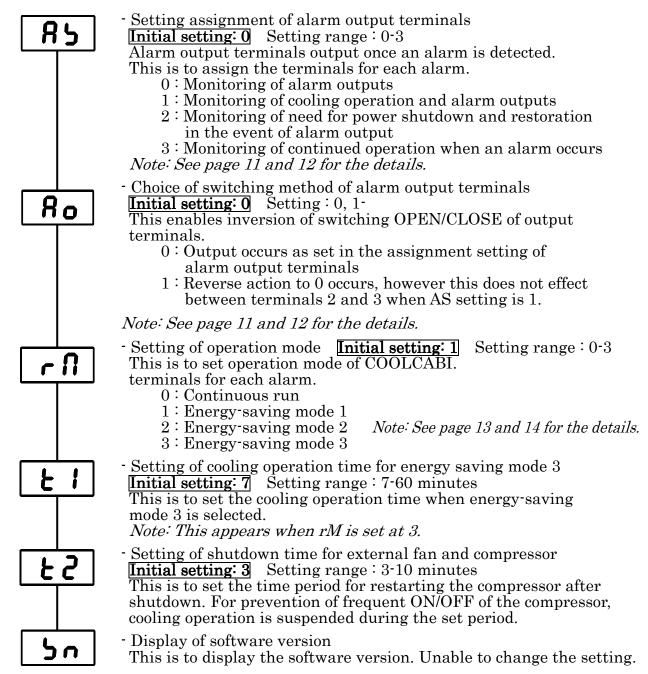

When you finish the setting, press SET button for 3 seconds or more. The display shows the current internal temperature again and the setting is stored.

When no button is pressed for more than 30 seconds during parameter setting, the screen displays the internal temperature again. To continue parameter setting, keep pressing SET button for 3 seconds or more.

4-6 Assignment of alarm output terminals

Alarm output terminals output once an alarm is detected. By setting the alarm output terminals, monitoring of many different operations is enabled. This setting functions by changing AS and Ao. Before supplying power to the cooling unit, both of terminals 1-2 and terminals 2-3 are open. The time lag between power input and the change-over of the terminals is 0.8 seconds.

- (1) Monitoring of alarm output [AS:0] [Initial setting] Change over the output in the event of alarm.
- (2) Monitoring of cooling operation and alarm output [AS:1] Change over the output when cooling operation is done and in the event of alarm
- (3) Monitoring of need for power shutdown and restoration in the event of alarm output [AS:2] This helps to determine whether power shutdown and restoration is required to cancel the alarm, or automatic or manual reset is enabled without power shutdown.
- (4) Monitoring of continued operation when an alarm occurs [AS:3] This helps to determine whether or not to continue cooling operation.

Assignment table of Alarm output terminals [Ao: 0]

Assignment table of Afarm output terminals [Ao : 0]							
AS	Operation behavior o	Terminals 1-2	Terminals 2-3	Function			
0	Normal operation		CLOSE	OPEN	Monitoring alarm outputs		
	Alarm output ON		OPEN	CLOSE			
1	In cooling operation	Each alarm output ON	CLOSE	CLOSE	Monitoring cooling operation and alarm outputs		
		Each alarm output OFF	OPEN	CLOSE			
	Cooling operation is stopped	Each alarm output ON	CLOSE	OPEN			
		Each alarm output OFF	OPEN	OPEN			
2 -	Alarms E1,E3,E4(*) output ON	Alarms E5, SE ON	CLOSE	CLOSE	Monitoring the need for power shutdown and restoration in the event of alarm		
		Alarms E5, SE OFF	OPEN	CLOSE			
	Alarms E1,E3,E4(*) output OFF	Alarms E5, SE ON	CLOSE	OPEN			
		Alarms E5, SE OFF	OPEN	OPEN			
3	Alarms E1,E4(*) output ON	Alarms E3, E5, SE ON	CLOSE	CLOSE	Monitoring the need for power shutdown and restoration in the event of alarm		
		Alarms E3, E5, SE OFF	OPEN	CLOSE			
	Alarms E1,E4(*) output OFF	Alarms E3, E5, SE ON	CLOSE	OPEN			
		Alarms E3, E5, SE OFF	OPEN	OPEN			

(*) Alarm E4 does not output when Fo is set at 0. (See page 10)

Assignment table of Alarm output terminals [Ao: 1]

AS	Operation behavior of the cooling unit		Terminals 1-2	Terminals 2-3	Function
0	Normal operation		OPEN	CLOSE	Monitoring alarm outputs
	Alarm output ON		CLOSE	OPEN	
1	In cooling operation	Each alarm output ON	OPEN	CLOSE	Monitoring cooling operation and alarm outputs
		Each alarm output OFF	CLOSE	CLOSE	
	Cooling operation is stopped	Each alarm output ON	OPEN	OPEN	
		Each alarm output OFF	CLOSE	OPEN	
2	Alarms E1,E3,E4(*) output ON	Alarms E5, SE ON	OPEN	OPEN	Monitoring the need for power shutdown and restoration in the event of alarm
		Alarms E5, SE OFF	CLOSE	OPEN	
	Alarms E1,E3,E4(*) output OFF	Alarms E5, SE ON	OPEN	CLOSE	
		Alarms E5, SE OFF	CLOSE	CLOSE	
3	Alarms E1,E4(*) output ON	Alarms E3, E5, SE ON	OPEN	OPEN	Monitoring the need for power shutdown and restoration in the event of alarm
		Alarms E3, E5, SE OFF	CLOSE	OPEN	
	Alarms E1,E4(*) output OFF	Alarms E3, E5, SE ON	OPEN	CLOSE	
		Alarms E3, E5, SE OFF	CLOSE	CLOSE	

(*) Alarm E4 does not output when Fo is set at 0. (See page 10)

4-7 Operation mode setting

Following to power connetion, COOLCABI starts operation in the each setting mode.

Factory setting for the setting temperature is 35°C with 5°C differential, which means the compressor starts for cooling when the temperature inside the enclosure reached 35°C and stops at 30°C. Four operation modes of continuous run and three different energy saving mode are available.


Pay attention to the following matters in every operation mode.

- •In case the internal temperature exceeds the high temperature alarm setting when power is turned on, the alarm lamp lights by the setting of AS and Ao according to the assignment table of alarm output terminals described in page 12.
- Cooling operation will not start for a certain period of time (initial setting: 3 min) after cooling operation has stopped even if the internal temperature goes up to the set temperature.


(1) Continuous run

Cooling operation starts at the set internal temperature and the external fan and the compressor will stop at the

set differential temperature. The internal fan does not stop. The values in the () show the default setting.

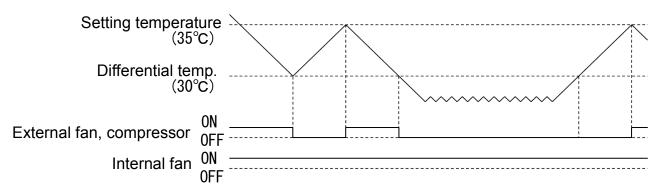

(2) Energy-saving mode 1 [Default setting]

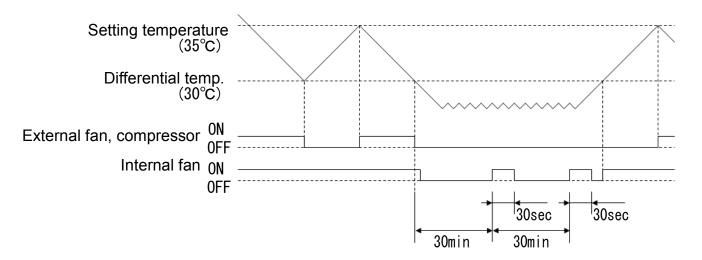


Note:

- For protection of the refrigerant circuit, the internal fan will not stop for 5 minutes after cooling operation has stopped.
- The internal fan runs continuously when the internal temperature exceeds the differential temperature.

(3)Energy-saving mode 2

The internal fan runs in conjunction with cooling operation.

Effective for energy saving when cooling operation is stopped under a low temperature like winter season. The values in the () show the default setting.

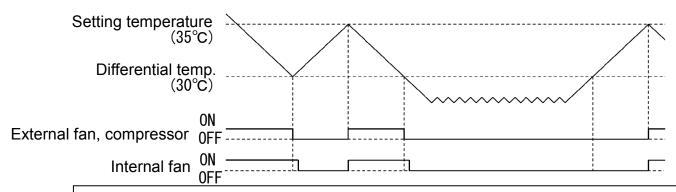


Note:

- There is a risk of creating hot spots because the air is not circulated by the internal fan.
- For protection of the refrigerant circuit, the internal fan will not stop for 5 minutes after cooling operation
- has stopped.

(4)Energy-saving mode 3

In case the internal temperature goes down below the set temperature but not reach the differential value, cooling operation and shutdown time take place by turns. Cooling and shutdown times are set by the parameters t1 and t2. The internal fan runs in conjunction with cooling operation.

The values in the () show the default setting.

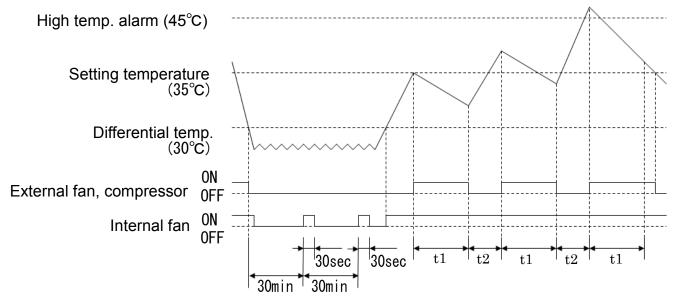

* Operation time of internal fan and compressor during intermittent operation (7 min.)

* Shutdown time of external fan and compressor (3 min.)

Note:

- -The internal temperature can exceeds the set temperature because the compressor is forcibly stopped by the set time period. In case the heat value inside the enclosure is large, the internal temperature can even exceeds the high temp. alarm temperature value.
- For prevention of excessive temperature rise inside the enclosure, cooling operation will be continued until the internal temperature goes down below the set value if the internal temperature has not reached the set value during the set time period.
- For protection of the refrigerant circuit, the internal fan will not stop for 5 minutes after cooling operation
 - has stopped.
- -The internal fan runs continuously when the internal temperature exceeds the differential temperature.

5. Alarm/Safeguard

5-1 Alarm

(1) E1: High Temp. Alarm

When the internal temperature reaches 45°C (factory setting), the alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 12). The display shows the current internal temperature and E1 by turns to indicate that the internal temperature is too high. Cooling operation will be continued.

When the internal temperature falls to 43°C(factory setting) or lower, the alarm output

contact returns to the original state and the alarm lamp turns off.

(2) E3: Radiation Error Alarm

If the cooling unit radiates too much heat due to some problems like clogged filters or fins or fan failure, the overheat detector in the refrigerant circuit is activated to stop cooling operation. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 12). The display shows the current internal temperature and E3 by turns to indicate abnormal radiation.

Clean the filters and the fins or replace the fan and them press the SET button of the temperature controller for more than 3 seconds to cancel the alarm. The cooling unit will

restart operation.

(3) E4: Maintenance reminder

When the cumulative operating hour reaches the set value, the alarm output terminals will break and make contact as set in AS, Ao and Fo to light alarm lamp (See the assignment table of alarm output terminals in page 12). Current internal temperatures and E4 are displayed by turns to remind you to carry out maintenance work. Cooling operation will be continued.

After completion of maintenance of filter and others, press SET button to cancel

the alarm.

Change of the parameter for this function makes the cumulative hours by that time zero and operating hours are counted anew.

(4) E5: Temperature Sensor Disconnection Alarm

Cooling operation will stop in the event of disconnection of the internal temperature sensor for some reasons. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 12). The display shows E5 only.

In the event of this failure, turn off the power immediately and contact your supplier.

(5) E8: Type Error Contact the supplier.

(6) SE: System Error

This error occurrs when the parmeters cannot be read correctly due to a memory fault. The display shows SE only.

In the event of this failure, turn off the power immediately and contact your supplier.

5-2 Safeguard

As a safeguard, this product is designed to stop operation under an abnormal current or a temperature.

In this event, the alarm E1 or E3 will occur.

A Caution



Be sure to disconnect power before carrying out any maintenance work.

<u>^</u>

Use the specified filter for replacement. Use of fine filters will cause efficiency loss in heat releasing which leads to reduced cooling performance and/or breakdown of the unit.

Cleaning and user maintenance shall not be made by children.

The appliance shall not be cleaned with a water jet.

The cooling circuit of COOLCABI has been filled with a required amount of refrigerant, tested for leaks and subject to a trial run before delivery. Therefore, there is no need of maintenance for the circuit. The durability of COOLCABI is generally 30,000 operating hours, provided that its filter is kept clean. Depending on the environmental condition at the site of use, check and clean the filter, if used, at least once a week. Clogging on filter may lead to deterioration

in cooling performance, or at worst, may cause shutdown of the unit due to overloading on the compressor.

6-1 Filter cleaning/replacement

Detach the filter from the guide of the front panel to clean or replace.

Filter (white color)

©Replacement filter for external suction port

Model	Applicable COOLCABI models
CF-S1 (2 pcs./set)	OCA-S300BC,OCA-S300BCS,OCA-S600BC
CF-S2 (2 pcs./set)	OCA-S1000BC
CF-S3 (2 pcs./set)	OCA-S1600BC

6-2 Replacement of the external fan (Ex. OCA-S600BC)

Fan replacement procedures are as follows.

① Turn off the COOLCABI.

② Unscrew the two screws of front panel to remove.

3 Unscrew the two screws fixing the fan as shown in the right.

4 Remove the electric cord, earth wire and the insulation rubber of fan terminals and then detach the fan to replace.

5 Attach a new fan in the reverse order to the above.

Note: - Pay attention not to get the cable caught in.

 Put the insulation rubber on the fan terminals without fail.

Please see the Page 17 for the model of replacement fan

6-3 Replacement of the internal fan (Ex. OCA-S600BC)

Remove the 4 screws as shown in the right.


Remove the fan mounting plate.


3 Remove the fan cord to replace the fan.

Insert the fan cord and reattach the mounting place in the reverse process.

*Pay attention not to tuck the fan cord.

Please see the Page 17 for the model of replacement fan

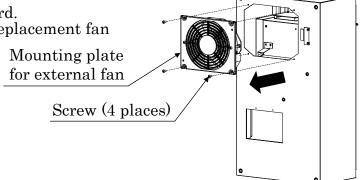

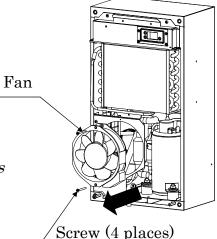

©Replacement fan

Applicable COOLCABI models	Model		
Applicable COOLCABI models	Internal fan	External fan	
OCA-S300BC-A200	FM-300BCIN-200V	FM-300BCOUT-200V	
OCA-S300BCS-A200	FM-300BCSIN-200V	FM-300BCSOUT-200V	
OCA-S600BC-A200	FM-600BCIN-200V	FM-600BCOUT-200V	
OCA-S1000BC-A200	FM-1000BCIN-200V	FM-1000BCOUT-200V	
OCA-S1600BC-A200	FM-1600BCIN-200V	FM-1600BCOUT-200V	
OCA-S300BC-A100	FM-300BCIN-100V	FM-300BCOUT-100V	
OCA-S600BC-A100	FM-600BCIN-100V	FM-600BCOUT-100V	
OCA-S1000BC-A100	FM-1000BCIN-100V	FM-1000BCOUT-100V	
OCA-S1600BC-A100	FM-1600BCIN-100V	FM-1600BCOUT-100V	

6-4 Troubleshooting

6-4 Troubleshooting		
Failure	Cause	Remedy
- Internal	a. Circuit breaker tripped	a. Turn on the breaker
temperature	b. Internal temperature is lower	b. Check the temperature
rises too much	than the setting temperature.	setting and the internal
- Cool air is not		temperature.
blown out	c. Less cooling capacity against	c. Set a higher value,
- Display shows High	the set value.	or change the cooling unit
Temp. Alarm E1 or		with a one of
Radiation	d. Ambient temperature is	higher capacity.
Error Alarm E3	too high	d. This unit is
		unusable under
		a circumstance where the
		ambient temperature may
	e. Internal temperature is	exceed 50 °C.
	too high.	e. This product cannot
		be used where
	f. Filter is dirty	temperature
	g. External fan is not running	exceeds 45 °C.
		f. Clean the filter.
		g. Check temperature
		setting and the internal
	h. Internal fan is not running	temperature.
		In case of fan failure,
		replace the fan.
		h. To check whether the fan
		works properly, execute
	i. Poor air circulation	forcible cooling
		(See 4-4 of page 9).
		If it did not run, fan
		replacement is necessary.
		i. Remove the
		problem referring
		to the page 3.
- Fall in internal	a. Setting temp. is too low	a. Change the setting.
temperature is too	b. Failure in the internal circuit	b. Contact the supplier.
much	or the temperature sensor	
- Too much	Control panel is not	Seal gaps to
condensation	airtight enough	improve airtightness
- Display shows E5	Built-in temperature	Contact the supplier.
D: 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	sensor breakage	
- Display shows E8	7.5	Contact the supplier.
- Display shows SE	Memory breakage	Contact the supplier.

Note: In case any problem is found during operation, turn off the power and stop using the product and contact your supplier providing information including the model and the purchasing date of your unit.

7. Specifications
7-1 Standard specification
Standard 200VAC

Model		OCA-S300BC	OCA-S300BCS	OCA-S600BC	OCA-S1000BC	OCA-S1600BC
101	-A200		-A200	-A200	-A200	-A200
Cooling ca	pacity *1	250/300W	280/300W	500/610W	800/1000W	1450/1600W
Rated	voltage		Single ph	ase 200VAC	50/60Hz	
Current	Rated	1.5/1.4A	1.4/1.2A	2.1/2.0A	3.4/3.7A	4.3/4.5A
consumption *2	Max.	1.6/1.6A	1.5/1.5A	2.4/2.7A	4.5/4.7A	4.9/5.6A
Startin	g current	3.8/3.7A	3.5/3.4A	5.9/5.7A	12.5/11.9A	14.4/13.8A
Power	Rated	260/270W	235/235W	380/400W	635/735W	795/895W
consumption *2	Max.	295/315W	275/290W	460/530W	800/905W	925/1110W
Compressor	motor output	100)W	250W	400W	470W
Noise (Cha	racteristic A)	65dB	61dB 656		dB	68dB
Refrigerant /Designation			HFC R134a		HFC I	R407C
	Amount	100g	130g	170g	400g	450g
GWP		1430		1770		
Outer dimensions 300 × 500		300 × 500 ×	300×550	350×900	390×950	
(WxHxD in mm) × 150		× 150	150	× 200	× 200	×220
We	eight	16.0kg	14.0kg	18.0kg	33.0kg	36.0kg

Bottom flow

Model		OCA-S300BC	OCA-S600BC	OCA-S1000BC	OCA-S1600BC
IVI	ouei	-A200-R	-A200-R	-A200-R	-A200-R
Cooling ca	apacity *1	240/290W	440/550W	720/920W	1290/1440W
Rated	voltage		Single phase 20	00VAC 50/60Hz	
Current	Rated	1.5/1.3A	2.1/2.1A	3.5/3.6A	4.2/4.3A
consumption *2	Max.	1.6/1.6A	2.4/2.7A	4.2/4.4A	4.9/5.5A
Startin	g current	3.8/3.7A	5.9/5.7A	12.5/11.9A	14.4/13.8A
Power	Rated	255/260W	380/405W	635/715W	770/860W
consumption *2	Max.	290/305W	455/525W	775/850W	930/1090W
Compressor	motor output	100W	250W	400W	470W
Noise (Cha	racteristic A)	65dB		67dB	
Refrigerant	Type Refrigerant /Designation		R134a	HFC R407C	
_	Amount	100g	170g	400g	450g
GWP		1430		1770	
Outer dimensions (WxHxD in mm) $300 \times 500 \times 150$ $300 \times 550 \times 200$		$350 \times 900 \times 200$	$390 \times 950 \times 220$		
We	eight	16.0kg 18.0kg 33.0kg 36.		36.0kg	

Standard 100VAC

Model		OCA-S300BC	OCA-S600BC	OCA-S1000BC	OCA-S1600BC	
Model		-A100	-A100	-A100	-A100	
Cooling ca	pacity *1	250/300W	400/520W	750/900W	1300/1450W	
Rated	voltage	Single phase 100VAC 50/60Hz				
Current consumption	Rated	3.1/2.6A	4.1/3.9A	7.8/8.1A	8.9/9.2A	
*2	Max.	3.3/3.1A	5.1/5.3A	10.5/9.8A	11.2/11.4A	
Starting	Starting current		7.0/6.7A	11.8/10.6A	24.3/20.2A	
Power consumption	Rated	265/250W	365/385W	665/770W	805/890W	
*2	Max.	310/300W	475/530W	1065/995W	1200/1135W	
Compressor	motor output	100W	250W	400W	470W	
Noise (Char	racteristic A)		65dB	68dB		
Refrigerant	Refrigerant /Designation		HFC R134a		R407C	
	Amount	100g	170g	400g	450g	
GWP		1430		1770		
Outer dimensions (WxHxD in mm)		$300 \times 500 \times 150$	$300 \times 550 \times 200$	$350 \times 900 \times 200$	$390 \times 950 \times 220$	
Weight		16.0kg	18.0kg	33.0kg	36.0kg	

Lateral mounting type common specification

Lateral mounting type common specification				
Type of mounting		Lateral Mounting Type		
Working te	mperature *3	+20°C to +50°C		
Workin	g humidity	Not exceeding 85%RH, free from condensation		
Setting tem	perature range *3	+30°C to +45°C (Initial setting: 35°C)		
D	isplay	Internal temperature, Alarm code/Operating lamp/Alarm lamp		
Function		Off-temperature alarm, Detection of abnormal heat dissipation, Detection of temperature sensor disconnection		
Extern	nal output	Alarm output, 1a 240V 1.5Ax2 Output (Common)		
Vibratio	n resistance	Vibratility 10-150Hz, Acceleration 0.5G, Sweep cycle 20 times		
Protecti	ve category	Internal circuit : equivalent to IP54		
	EMC directive	Conforming to EN61000-6-2 and EN61000-6-4		
Applicable standards	Low voltage directive	EN60335-1, EN60335-2-40 and EN62233		
standards	Environmental standard	RoHS		
Boo	ly color	Beige (5Y7/1 corresponding)		
Fuse rating	of control board	250V 1A		

Note) *1 Nominal value when temperatures both inside and outside the control panel is 35°C By attaching the provided louver, the capacity can reduce up to 5%.


*2 Values at 35°C temperature both inside and outside are indicated in "Rated" and values at 50°C outside and 35°C inside are indicated in "Max.".

*3 These products should not be used outside the temperature range.

7-2 A complete set of supply

1 2 11 complete set	or suppry				
Item	OCA-S300BC	OCA-S300BCS	OCA-S600BC	OCA-S1000BC	OCA-S1600BC
COOLCABI			1		
Fixing bolt	$M6 \times 35 \text{ mm}: 4$	$M6 \times 35 \text{ mm} : 6$	$M6 \times 35 \text{ mm} : 4$	$M6 \times 35 \text{ mm} : 6$	$M6 \times 35 \text{ mm} : 6$
Washer	M6:4	M6:6	M6:4	M6:6	M6:6
Spring washer	M6:4	M6:6	M6:4	M6:6	M6:6
Nut	M6:4	M6:6	M6:4	M6:6	M6:6
Packing	1 roll				
Drain hose		2m			
Terminal board	1				
Alarm explanation	1				
sheet					
Instruction manual			1		
Adjustable louver	1 (*)	-	1 (*)	2	(*)
Screws for louver	M4:4 (*) - M4:4 (*) M4:6 (*)			6 (*)	


Note) * Not included with shipment for Bottom-flow units, which have "-R" in their model numbers.

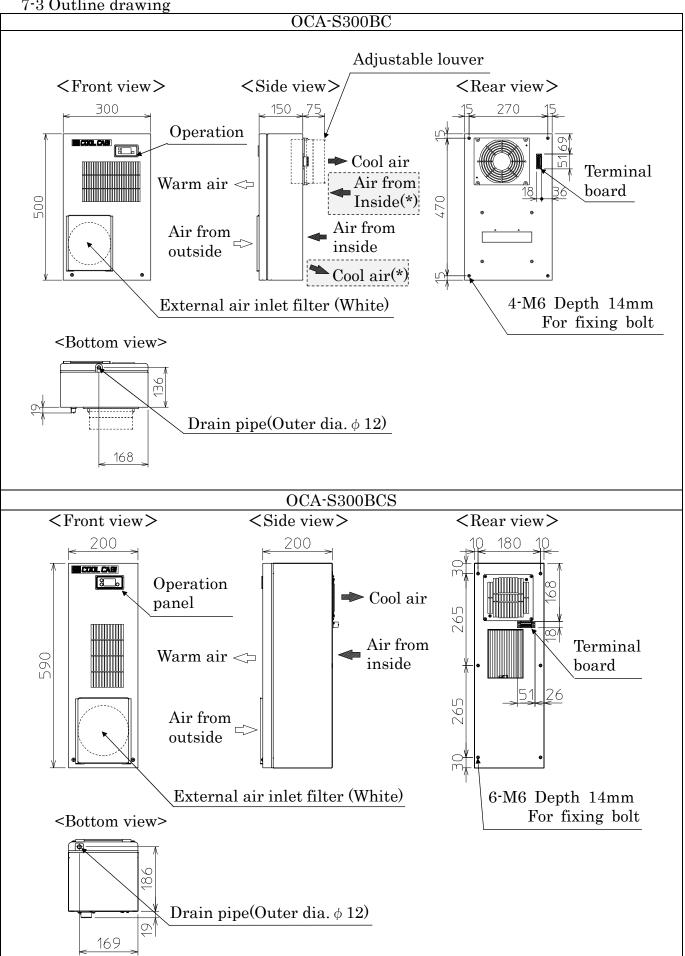

About Bottom-flow type units (which have "-R" in their model numbers)
- The wind flows in the direction shown in the area enclosed by the dotted line, which is reverse to the wind flow of Standard type units.

- A mesh filter is attached to the cool air outlet for prevention of water scattering.


- The adjustable louver is not included with shipment.

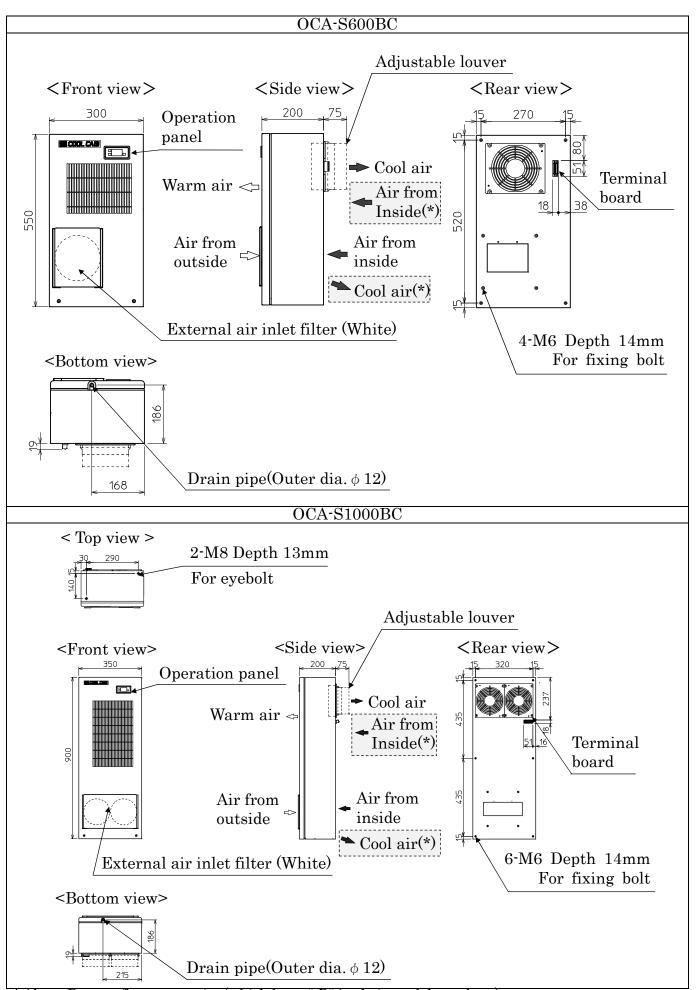

About Bottom-flow type units (which have "-R" in their model numbers)

The wind flows in the direction shown in the area enclosed by the dotted line, which is reverse to the wind flow of Standard type units.

- A mesh filter is attached to the cool air outlet for prevention of water scattering.
- The adjustable louver is not included with shipment.

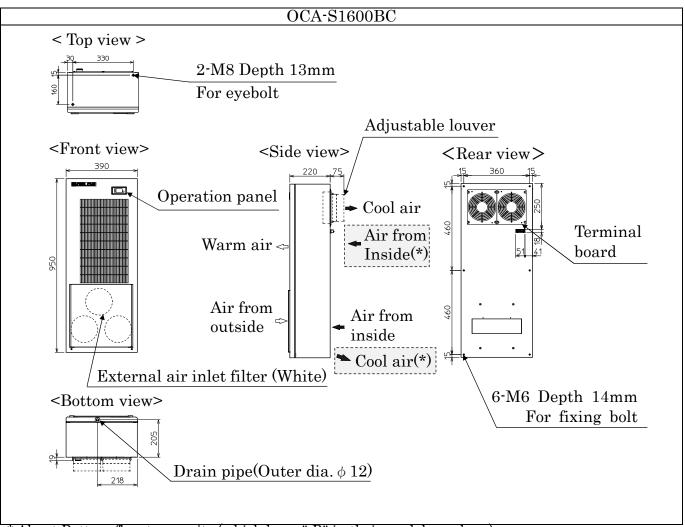

About Bottom-flow type units (which have "-R" in their model numbers)

- The wind flows in the direction shown in the area enclosed by the dotted line, which is reverse to the wind flow of Standard type units.

- A mesh filter is attached to the cool air outlet for prevention of water scattering.

- The adjustable louver is not included with shipment.

8. Warranty period

This product is covered with 1-year warranty from the date of shipment, provided that such warranty does not apply to damages malfunctions resulted from other than normal use.

9. Waste disposal

This products uses chlorofluorocarbon (HFC) as a refrigerant which requires special handling for its disposal. Please observe the applicable laws and regulations governing your country and local area and make a proper disposal by a professional waste disposal service.

- For the purpose of environmental protection, please observe the followings.
 - Do not release the refrigerant sealed in the cooling circuit into the atmosphere.
 - Recover the refrigerant properly when the product is disposed.
 - Unnecessary refrigerant arisen from repairing work should be properly recovered without releasing into the atmosphere.
- Refrigerant number and its amount are stated in the rating plate on the unit.
- The recovery cost of refrigerant should be paid by the user.
- Recovery of the refrigerant should be done by an authorized waste disposer.

Main Factory: 7000-21, Nakagawa, Hosoe, Kita-Ku, Hamamatsu, Shizuoka 431-1304, Japan TEL 81-53-522-5559 FAX 81-53-523-2361 http://www.ohm.jp/

The contents of this manual is as of April, 2015. COOLCABI Instruction Manual: The 5th edition